

1



2



3



Please Note –
Completed Table **MUST** sit
on a flat level surface to prevent flexing

- 1) Begin by standing up the legs on a flat level surface and then setting the bench tops over the legs and in line with the pre-drilled screw holes. Anchor each corner with a screw and use a level to ensure the legs are straight before continuing.
- 2) Carefully Set the Top in Place and attach with the supplied Screws.
- 3) Fasten the braces to the underside of the table and to the legs. Make sure to use the double cut side in the middle of the table and the single cut side to the inside of the table legs.

***4-Ft. Recycled Plastic Picnic Table
Item #: 260-1006***