

Cleaning & Care

Our mineral-filled plastic lumber furniture is designed to require very little maintenance apart from an annual cleaning.

When dirt or debris begin to accumulate on your park products, simply sweep it away, hose it off, or lightly wash the boards with soap and water. Any standard household cleaner can be used without harming the plastic.

Occasionally, mold and mildew will form on the dirt that has built up on the boards, but it will not permeate the surface and can be removed with a light pressure washing. We recommend using a maximum 1800psi with a 20-degree nozzle.

50 Year Limited Warranty

The Park and Facilities Catalog is committed to upholding the highest standards of quality and workmanship in the design and manufacturing of our outdoor furniture products. With our 50 Year Limited Warranty, you can be confident that your Park Catalog products will undoubtedly look great year after year.

We warrant that all of our durable recycled HDPE plastic materials will not rot, split, crack, splinter or be adversely affected by insects within the first 50 years of their lifetime. Some metal components require minimal maintenance in order to prolong the lifetime of these products. It should not be construed that these metal components will last as long as their plastic counterparts. Our warranty covers residential and commercial applications.

Scratches & Stains

The Park Catalog table is made with a closed-molecular formula that contains no organic material. This means that almost nothing can adhere to our plastic lumber, making it resilient to stains and graffiti. Additionally, you will never need to paint or stain your outdoor furnishings. Our color additives contain a UV-protection agent that ensures no noticeable fading even if the product is left in direct sunlight.

Because our plastic lumber is consistent in color throughout the board, the appearance of scratches is greatly diminished. Scratches and deep gouges can be easily removed with a propane torch and a putty knife.

Hold the propane torch about three inches away from the damaged board and lightly wave the torch over the scratch. When the plastic has melted slightly, use the putty knife to smooth the scratch out of the board. Be careful not to hold the propane torch in one place for too long. It will burn the product if done incorrectly.



Still have questions? Visit us online at

www.theparkcatalog.com

or call us toll free at **800-695-3503**



ASSEMBLY INSTRUCTIONS

Eco Picnic Table

For Model #260-1014

The Park and Facilities Catalog

220 Congress Park Dr. #215 Delray Beach, FL 33445

www.theparkcatalog.com

P: (800) 695-3503 • • sales@theparkcatalog.com

Eco Picnic Table Instructions



Thank you for choosing The Park and Facilities Catalog recycled plastic outdoor furniture.

If you have questions about the installation of these products, please call us at (800) 695-3503. Our customer service representatives can quickly assist you with installation questions and missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for anything other than its intended use. The Park and Facilities Catalog is not liable for damage or injury caused by incorrect assembly or incorrect use. For our return or replacement policy, please visit us online at www.theparkcatalog.com.


Required Tools

- Tape measure
- Drill & #2 Square drive bit
- Rubber mallet
- Blocks for support

Part List *Some parts may be pre-assembled

- (1) Table top
- (2) Benches
- (1) Hardware kit
- (2) Legs
- (2) Cross braces

Instructions

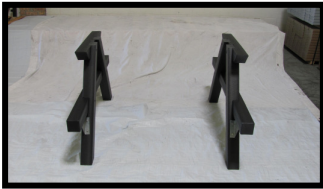

STEP 1: SET UP THE LEGS

Start by selecting a flat level surface to assemble your table on. Next set your legs up (use a block to hold it upright.) Approximately the same distance apart as the predrilled holes in the top and seats.

Instructions *(continued)*

STEP 2: BENCH PLACEMENT

Place the benches over the legs, With the legs lining up under the predrilled holes in the bench, also the bench should hang over end of leg by 1/4 to 1/2 inch. Screw benches in place using the 4 1/2" screw to go through the leg horizontally into the 4x4 under the bench (you might want to pre drill an 3/16 hole for this screw to go in easier.) Next make sure leg is straight up and down than secure benches in place with the screws provided.

NOTE: Do not over tighten screws

STEP3:TOP PLACEMENT

Place the top over the legs so that the predrilled holes are directly over the center of the leg., and set in place. While it is still loose you can make adjustments to make sure it is centered (tap with rubber mallet if needed) Next measure the distance from the leg to the end of the table This should be the same as the benches. Once you have everything lined up you can screw in place.

STEP 3: CROSS BRACES

Set your cross braces in place. (these should attach from the center of the lower horizontal support on the leg to the side of the center support on the bottom of the table top When attaching the cross braces you want to make sure they are centered on the leg and top, than hold in place pushing upward while you secure the bottom end, Than secure the top ends again, while pushing up.

STEP 5: SIT BACK AND RELAX!

