




**A-Frame Recycled Plastic Picnic Table - 6 Ft.
289-4007**

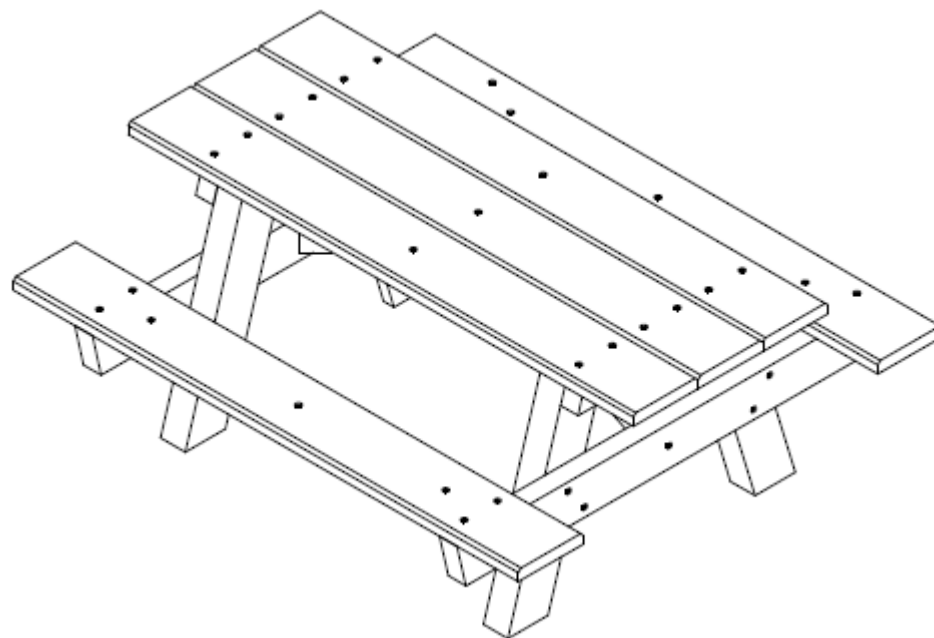


Dimensions

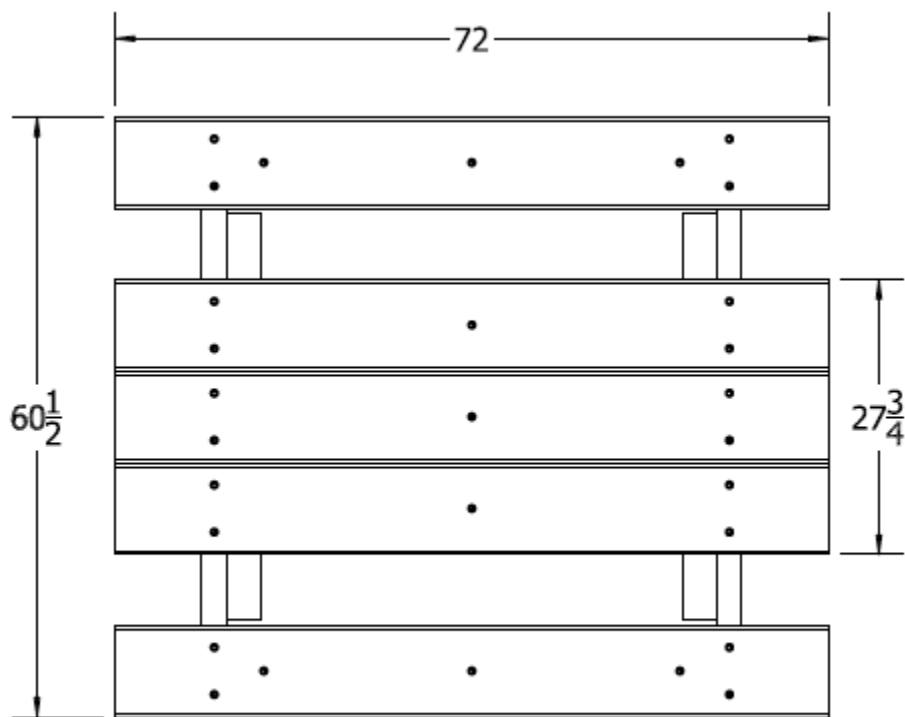

TOP VIEW

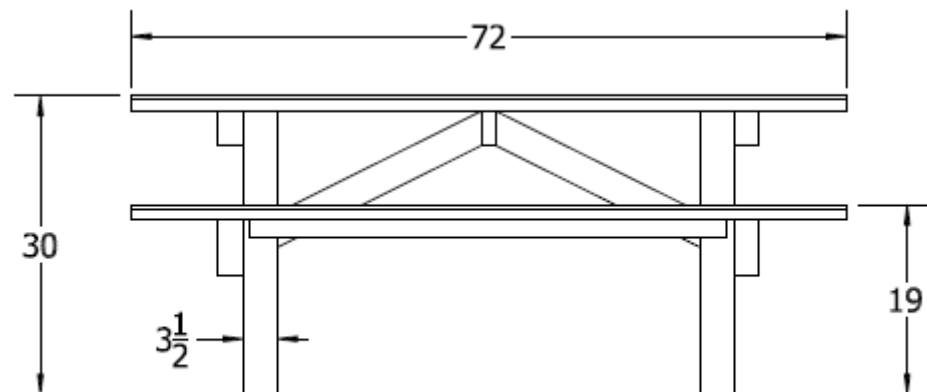


FRONT VIEW

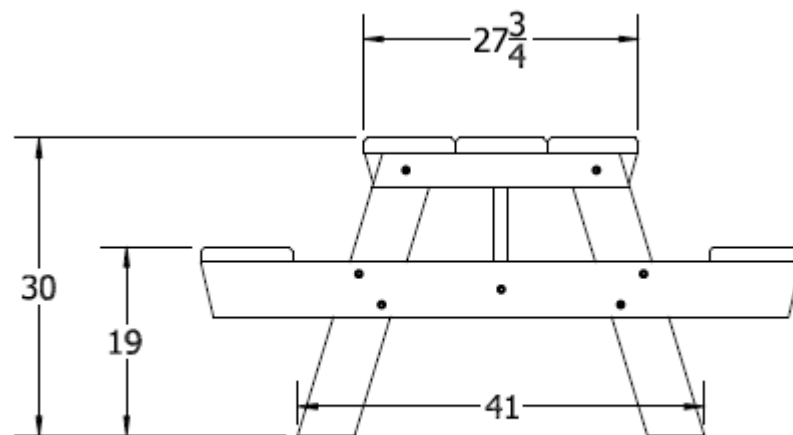


SIDE VIEW

Components


Tools for Assembly: Powered driver
7/16 Socket
Phillips Head Bit

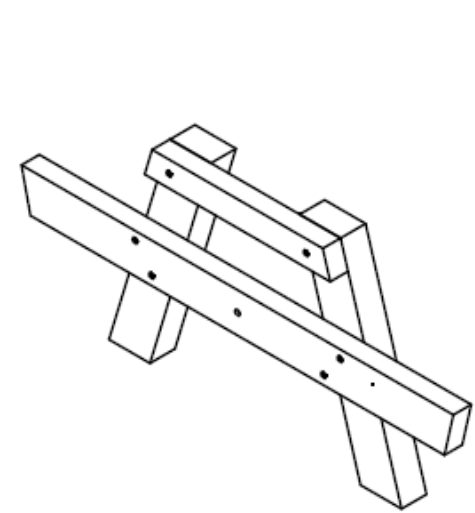

(2) A-Frame Bases

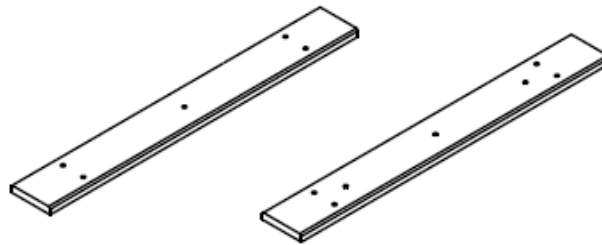


(3) Table Top Slats (2) Seat Slats

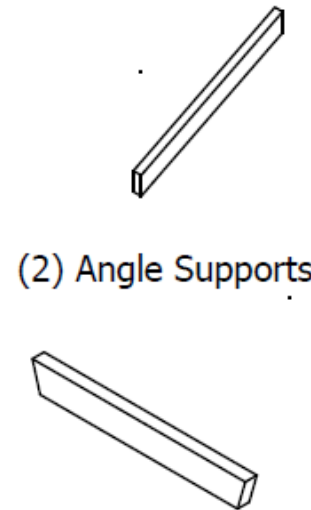

(2) Angle Supports

(1) Horizontal Support

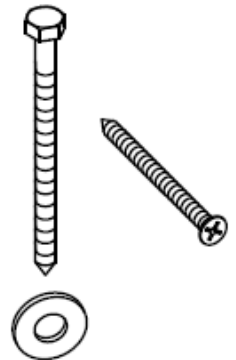

Hardware

(23) 3 1/2" Hex Lag Screws
(23) Flat Washers
(6) 3" Deck Screws

Assembly Instructions

Before you begin: Check components to verify all are included. Assembly requires two people and must be performed on a flat and even surface. Do not overtighten hardware as damage can occur.

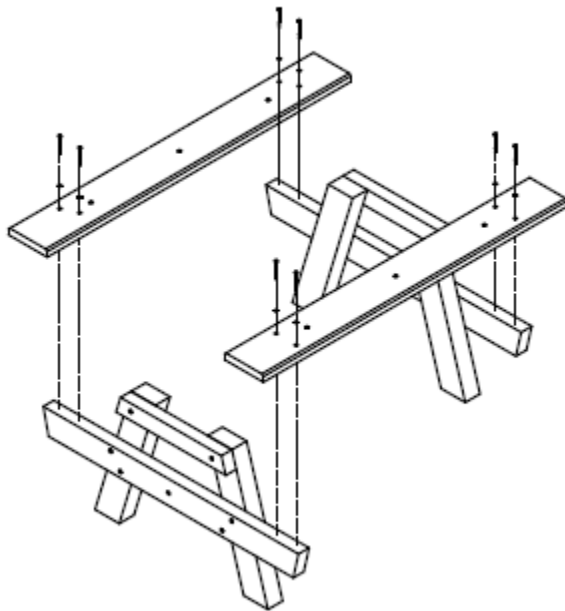


Illustration 'A'

Step 1

Stand A-frame bases upright and parallel to each other, the horizontal supports should face away from the center of the table. Place a slat on the top edge of the horizontal 3 x 6 of the A-Frame base supporting the seat. The pre-drilled holes should align more or less with the center line of the 3 x 6 support. Ensure the bases are square and plumb. Use the pre-drilled holes in the seat slat as a guide, drill starter holes in the 3 x 6 and attach using the 3 1/2" hex lag screws and flat washers. See Illustration 'A'. Repeat on the other side.

Assembly Instructions Cont.

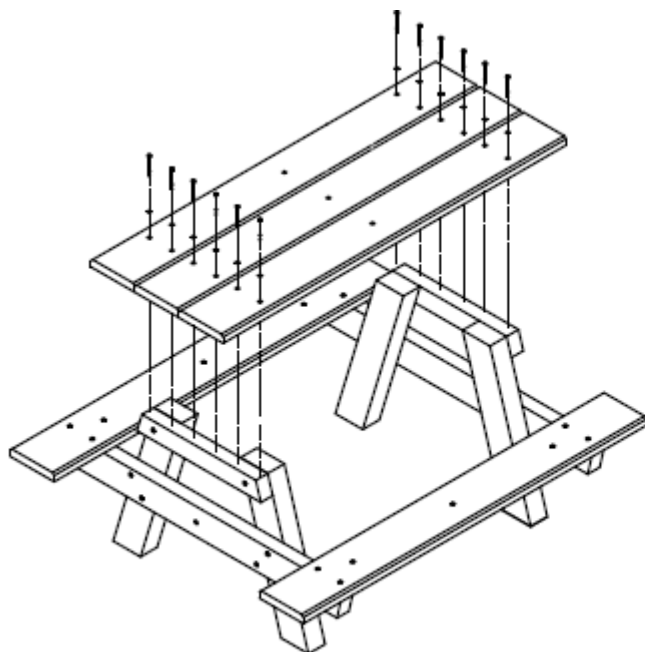


Illustration 'B'

Step 2

Place the table top slats spaced evenly on the A-Frames top supports, the pre-drilled holes should align more or less on the center line of each 3 x 4 cross support. Attach using the 3 1/2" hex lag screws and flat washers. See Illustration 'B'.

Assembly Instructions Cont.

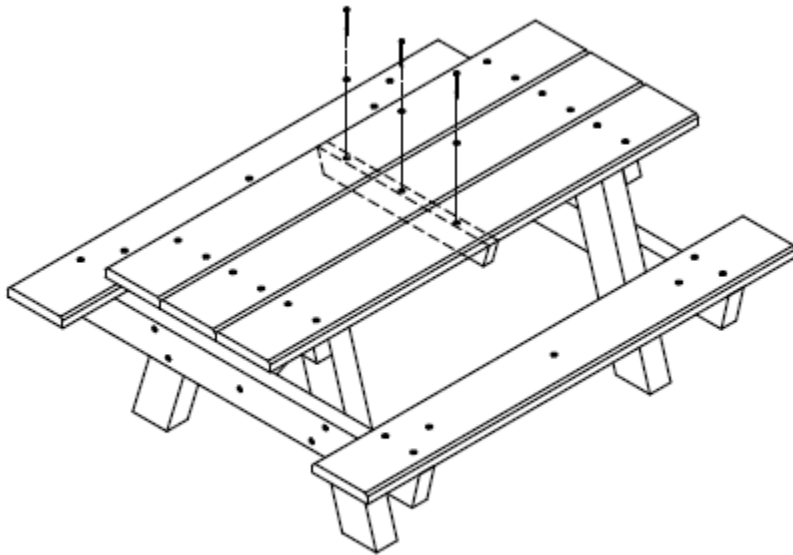


Illustration 'C'

Step 3

Align the horizontal support board on the underneath side and center of the table top. Attach using 3-1/2" lag screws and flat washers. See Illustration 'C'.

Assembly Instructions Cont.

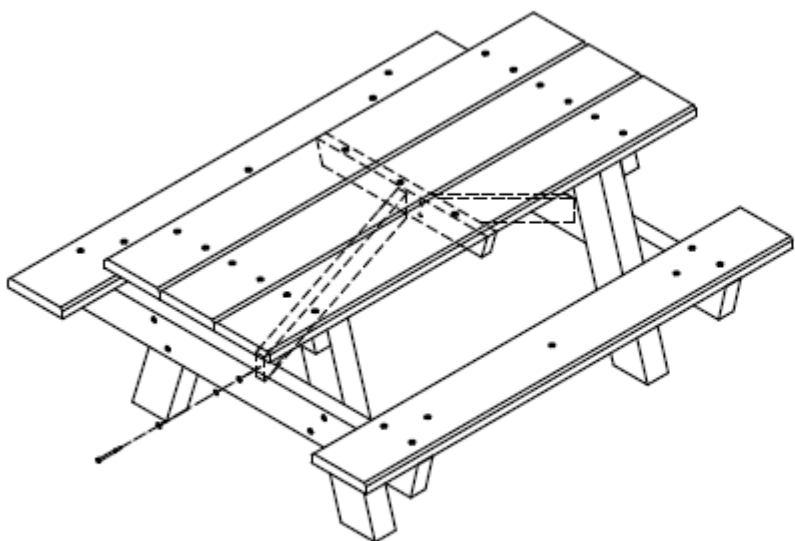


Illustration 'D'

Step 4

Attach the angle support with deck screws to the A-frame vertical at the pre-drilled hole. The table top should have a slight crown before attaching angle supports to the horizontal support in the middle. The angle supports should be offset slightly so you can attach with the deck screws through each horizontal support. See Illustration 'D'.

Cleaning Tips

The Park Catalog products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Park Catalog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.