


Specifications for item 133-1015

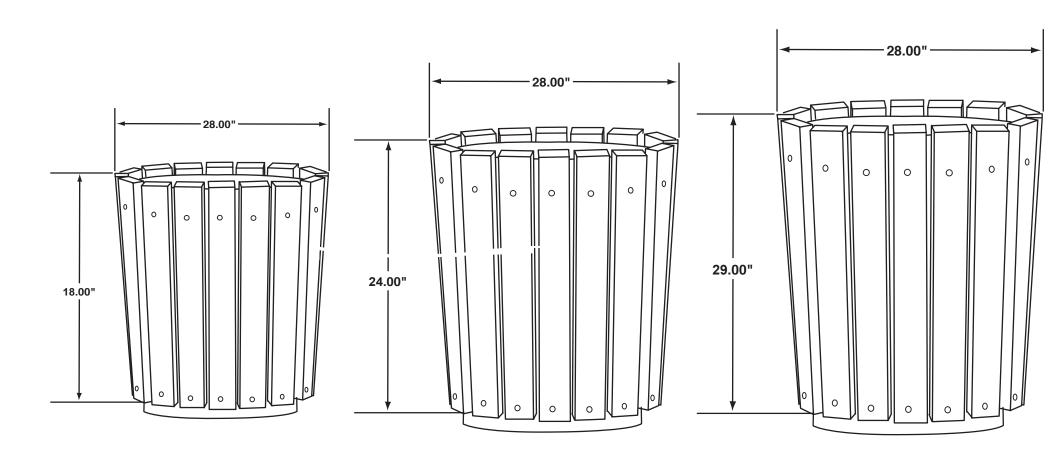

ASSEMBLY INSTRUCTIONS ITEM 133-1015

STEP 1: PLACE BOTTOM RING ON FLAT SURFACE SO HOLES ARE POSITIONED ABOVE THE METAL CROSS-BRACE IN THE CENTER OF RING.

STEP 2: ALL PROFILES SHOULD BE POSITIONED SO THE HOLE THAT IS 3" FROM THE EDGE IS AT THE TOP, AND THE "MOLD" SEAM IS FACING TOWARD THE INSIDE. LOCATE THE 2 PROFILES WITH THE 4 HOLES AND ATTACH THEM ACROSS FROM EACH OTHER FIRST. SLIDE THE PROFILES TO ALIGN THE HOLE WITH THE CORRESPONDING HOLE IN THE BOTTOM RING.

<u>STEP 3:</u> INSERT A 2" BOLT THROUGH THE PROFILES INTO THE BOTTOM RING. PLACE A NUT AND WASHER ONTO THE BOTTOM OF BOLT – **HAND TIGHTEN ONLY!!**

SM M LG REF # QTY QTY QTY DESCRIPTION **TOP RING** 1 2 1 **BOTTOM RING** 18 2" X 4" X 18" PROFILE 2" X 4" X 24" PROFILE 3 18 2" X 4" X 29" PROFILE 18 2" X 4" X 23" LINER SUPPORT 1 4 2" X 4" X 23-3/4" LINER SUPPORT 5 **RUBBER LINER** HARDWARE KIT 6 36 36 36 5/16" X 2" CARRIAGE BOLT 7 36 36 36 5/16" HEX NUT 8 36 36 36 5/16" WASHER #14 X 3-1/2" PHS SCREW 9 2 2

<u>STEP 5:</u> WITH FOUR PROFILES IN PLACE, SLIDE THE TOP RING INSIDE THE CORRESPONDING HOLES IN THE FOUR PROFILES. INSERT A 2" BOLT THROUGH EACH PROFILE AND INTO THE TOP RING. PLACE A NUT AND WASHER ONTO THE BOTTOM OF EACH BOLT – **HAND TIGHTEN ONLY!!**

<u>STEP 6:</u> PLACE REMAINING PROFILES ONTO RINGS, MAKING SURE THE "MOLD" SEAM IS FACING TOWARD THE INSIDE. (PUT BOLTS IN THE BOTTOM RING FIRST).

<u>STEP 7:</u> ONCE ALL BOLTS AND NUTS ARE IN PLACE, TIGHTEN ALL BOLTS SECURELY WITH A HAND TOOL, SHIFTING YOUR PLANTER WHERE NECESSARY TO INSURE A NEAT SQUARE APPEARANCE.

<u>STEP 8:</u> PLACE THE LINER SUPPORT PROFILE ON THE INSIDE OF THE PLANTER AND ATTACH USING THE 3-1/2" PHILLIPS SCREWS.

Your 100% recycled plastic planter will give you many years of pleasure and pride, knowing that you did your part in keeping plastic waste out of landfills and protecting our environment.



