






## Specifications for item 133-1035

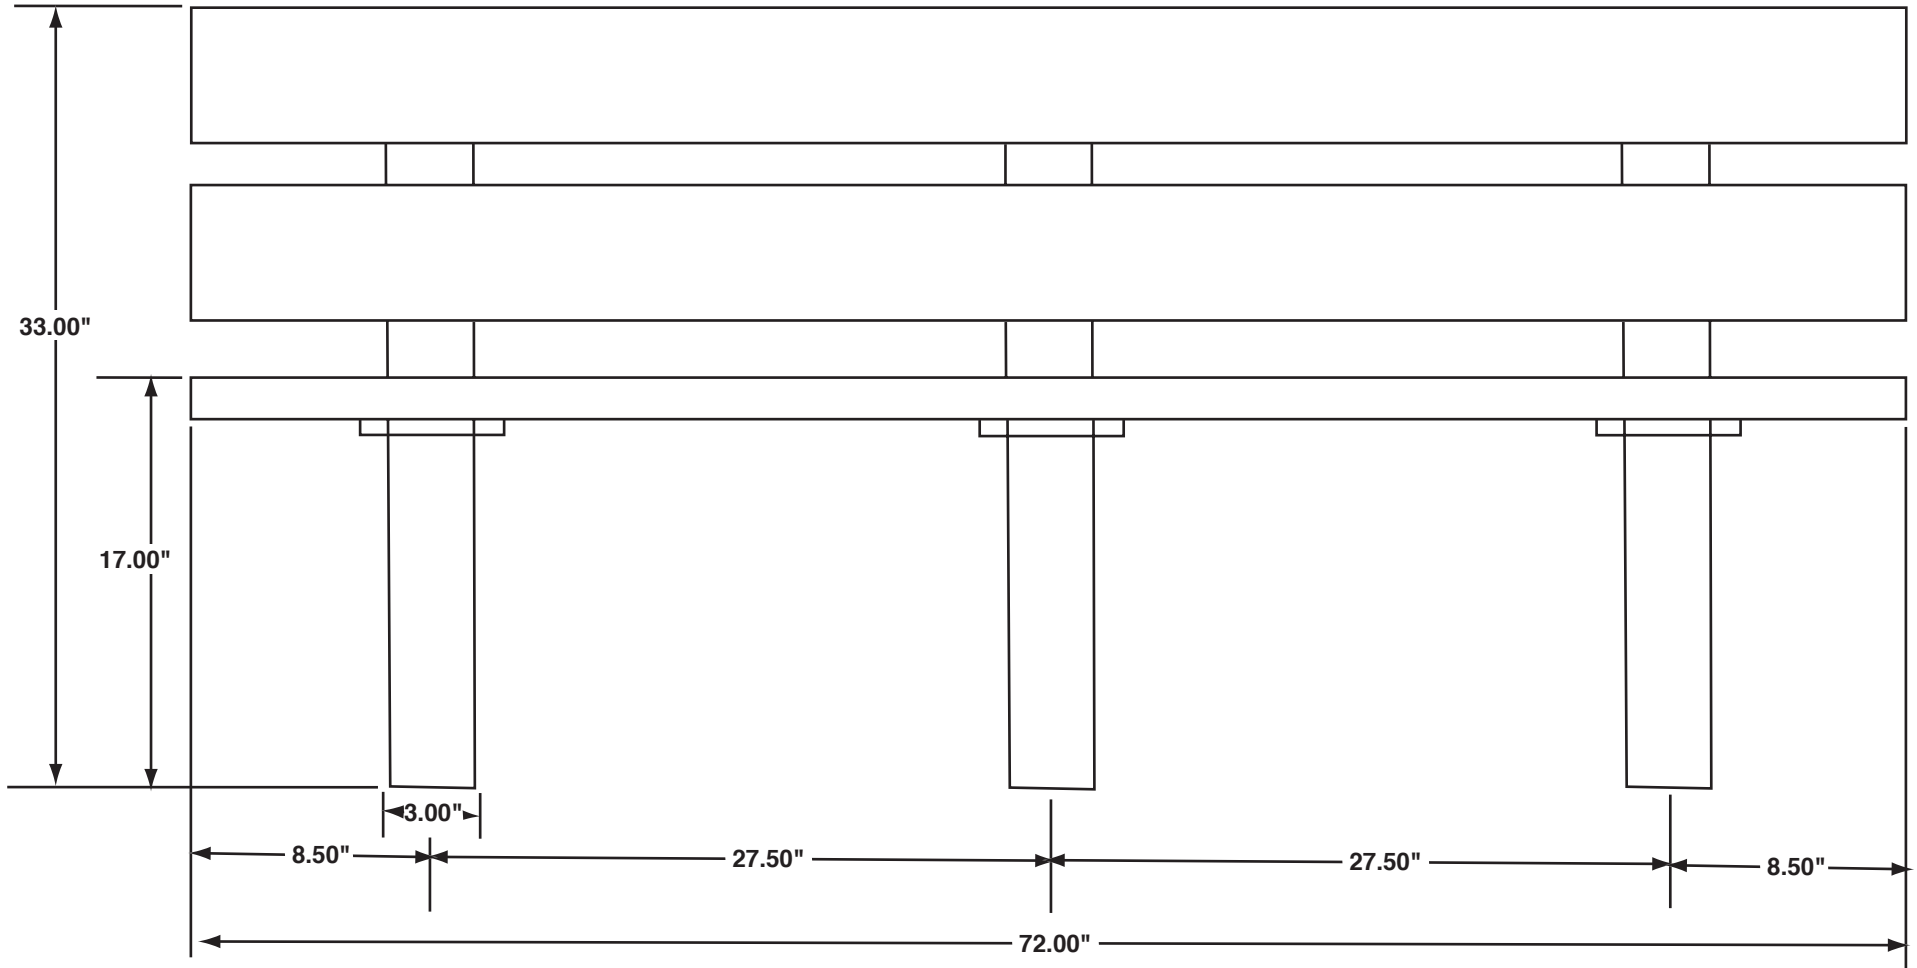

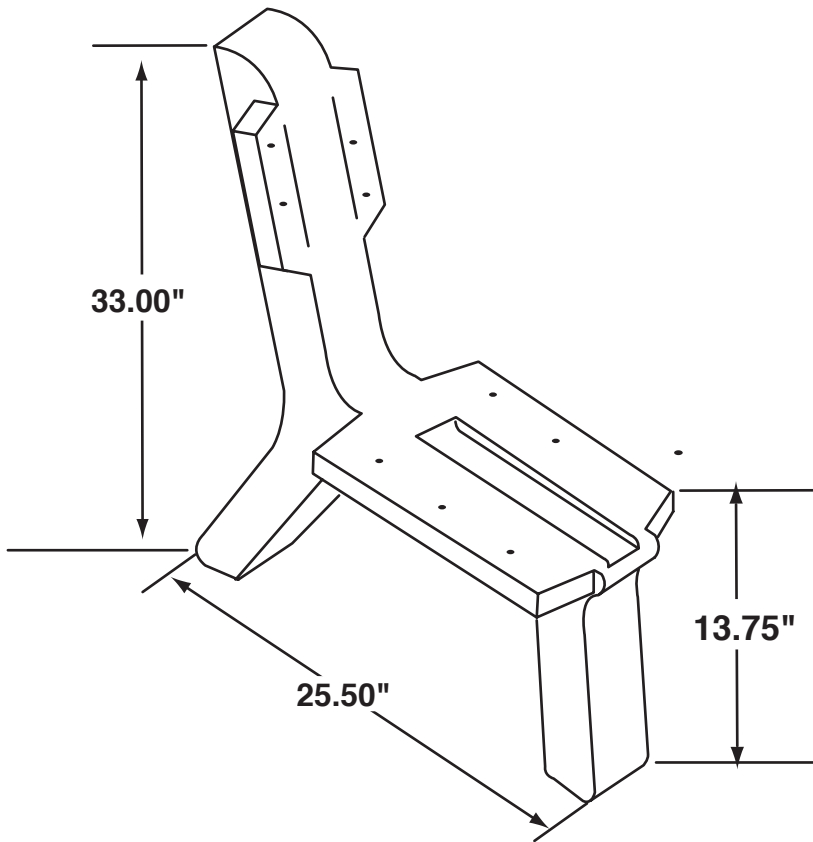

Surface Mount Leg

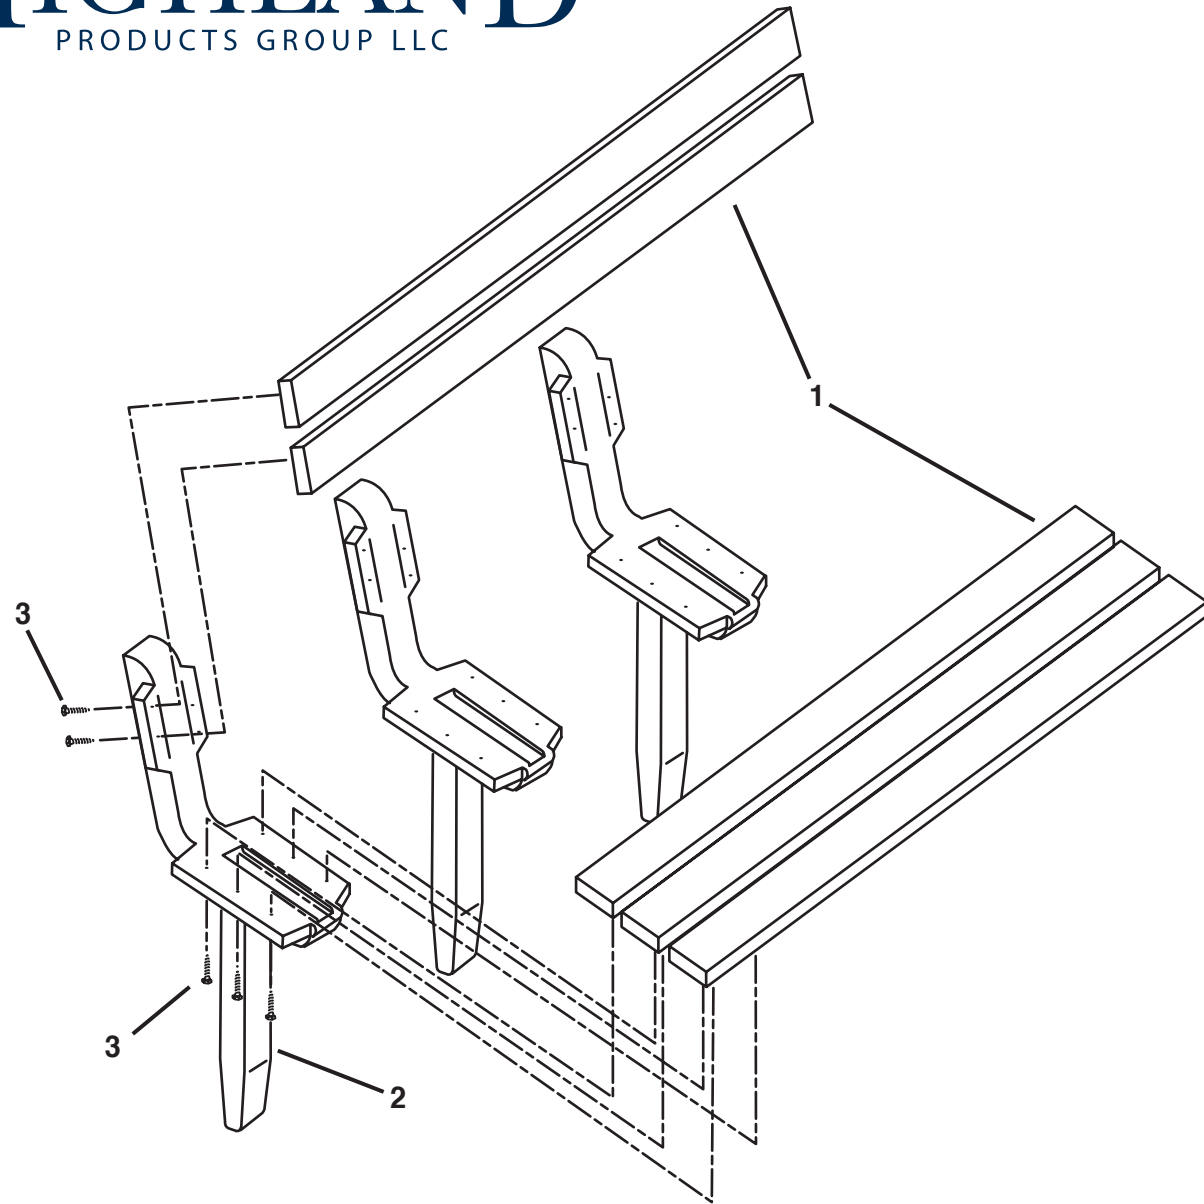

Inground Mount Leg


## ASSEMBLY INSTRUCTIONS

### ITEM 133-1035 SURFACE MOUNT

**STEP 1:** PLACE THE BENCH ENDS FACING UPRIGHT ON A LEVEL SURFACE. (ESTIMATE SPACING).

**STEP 2:** PLACE 3 OF THE 2 X 6 BOARDS ONTO THE SEAT ALIGNING THE HOLES IN THE BENCH ENDS WITH THE PILOT HOLES IN THE 2X6'S. FASTEN THE BOARDS TO EACH BENCH END FROM THE UNDERSIDE OF THE BENCH ENDS USING 6 OF THE 2-1/4" SCREWS PER BENCH END.

**STEP 3:** PLACE ONE OF THE 2 X 6 BOARDS ONTO THE BACK OF THE BENCH. ALIGN THE HOLES IN THE BACK OF THE BENCH ENDS WITH THE PILOT HOLES IN THE BOARDS. ATTACH THE BOARD TO THE BENCH ENDS USING 2 OF THE 2-1/4" SCREWS PER BENCH END. REPEAT FOR THE REMAINING 2 X 6.


	4'	6'	8'	
REF#	QTY	QTY	QTY	DESCRIPTION
1	5	5	5	2" X 6" PROFILE
2	2	3	4	BENCH END
3	20	30	40	HARDWARE KIT #14 X 2-1/4" SS FH PHILLIPS SCREW 

**NOTE:** PROFILES MAY BE DIRECTIONAL  
AND YOU MAY NEED TO TURN THEM END-FOR-END IF THEY DO NOT LINE UP SQUARELY.

*Your 100% recycled plastic park bench will give you many years of pleasure and pride,  
knowing that you did your part in keeping plastic waste out of landfills and protecting our environment.*



3350 NW Boca Raton Blvd., Suite B2 Boca Raton, FL, 33431  
Phone: 561.620.7878 Fax: 561.620.8668

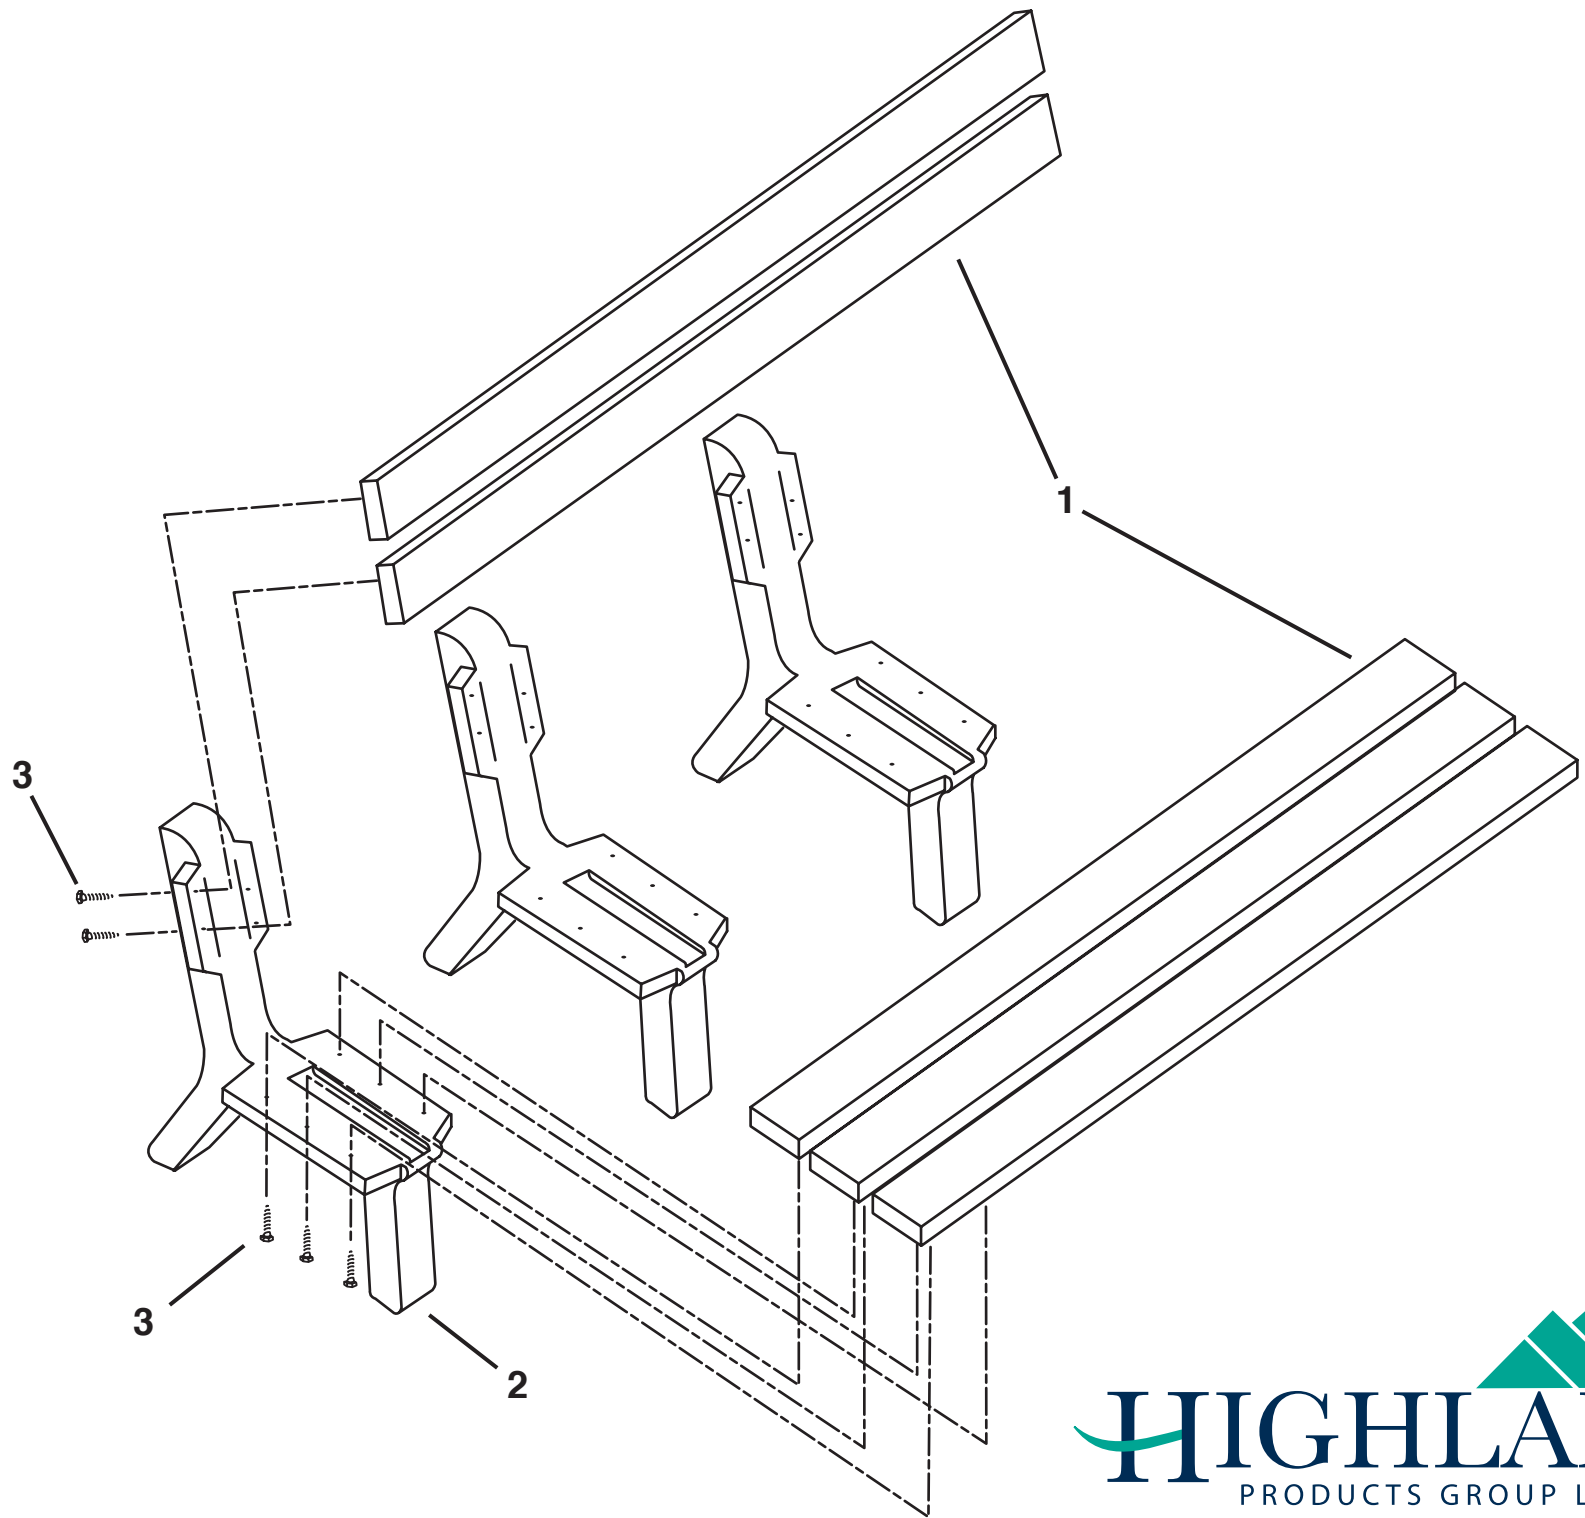

  
**HIGHLAND**  
PRODUCTS GROUP LLC

3350 NW Boca Raton Blvd., Suite B2 Boca Raton, FL, 33431  
Phone: 561.620.7878 Fax: 561.620.8668


## ASSEMBLY INSTRUCTIONS

### ITEM 133-1035 INGROUND MOUNT

**STEP 1:** PLACE THE BENCH ENDS DOWN SO THE HOLES IN THE TOP ARE VERTICAL TO THE GROUND WITH THE “SPIKED” END SLANTING AWAY FROM YOU. (ESTIMATE SPACING).

**STEP 2:** PLACE 3 OF THE 2 X 6 BOARDS ONTO THE SEAT ALIGNING THE HOLES IN THE BENCH ENDS WITH THE PILOT HOLES IN THE 2X6’S. FASTEN THE BOARDS TO EACH BENCH END FROM THE UNDERSIDE OF THE BENCH ENDS USING 6 OF THE 2-1/4” SCREWS PER BENCH END.

**STEP 3:** PLACE ONE OF THE 2 X 6 BOARDS ONTO THE BACK OF THE BENCH. ALIGN THE HOLES IN THE BACK OF THE BENCH ENDS WITH THE PILOT HOLES IN THE BOARDS. ATTACH THE BOARD TO THE BENCH ENDS USING 2 OF THE 2-1/4” SCREWS PER BENCH END. REPEAT FOR THE REMAINING 2 X 6.


	4'	6'	8'	
REF#	QTY	QTY	QTY	DESCRIPTION
1	5	5	5	2" X 6" PROFILE
2	2	3	4	BENCH END
3	20	30	40	HARDWARE KIT #14 X 2-1/4" SS FH PHILLIPS SCREW 

**STEP 4:** ONCE THE BENCH IS ASSEMBLED PLACE THE BENCH WHERE YOU WANT TO INSTALL IT (STILL ON ITS BACK). MARK THE GROUND WHERE THE “SPIKED” ENDS ARE. DIG POSTHOLES APPROXIMATELY 18 INCHES DEEP WHERE YOU MADE YOUR MARKS. CHECK THE DISTANCE FROM THE GROUND TO THE TOP OF THE BENCH SEAT. WE RECOMMEND THE SEAT HEIGHT BE APPROXIMATELY 17”, BUT NO LOWER THAN 15”. ADD OR REMOVE DIRT (OR ADD SMALL ROCKS) TO ADJUST HEIGHT. PLACE A STRAIGHT ITEM ACROSS THE SEAT TO ENSURE THE LEGS ARE ALL AT THE SAME HEIGHT TO PREVENT BOWING OR SAGGING IN THE MIDDLE. PLACE THE “SPIKED” ENDS IN THE HOLES, FILL WITH DIRT OR CONCRETE FOR A MORE PERMANENT INSTALLATION. USE A LEVEL TO CHECK FINAL ALIGNMENT OF THE BENCH AND ADJUST AS NECESSARY.

**OPTIONAL:** A HOLE CAN BE DRILLED THROUGH THE BASE OF THE “SPIKED” ENDS AND A LENGTH OF PIPE OR REBAR CAN BE PLACED THROUGH THE HOLE TO ASSIST IN THEFT PREVENTION.

**NOTE:** PROFILES MAY BE DIRECTIONAL  
AND YOU MAY NEED TO TURN THEM END-FOR-END IF THEY DO NOT LINE UP SQUARELY.

*Your 100% recycled plastic park bench will give you many years of pleasure and pride,  
knowing that you did your part in keeping plastic waste out of landfills and protecting our environment.*

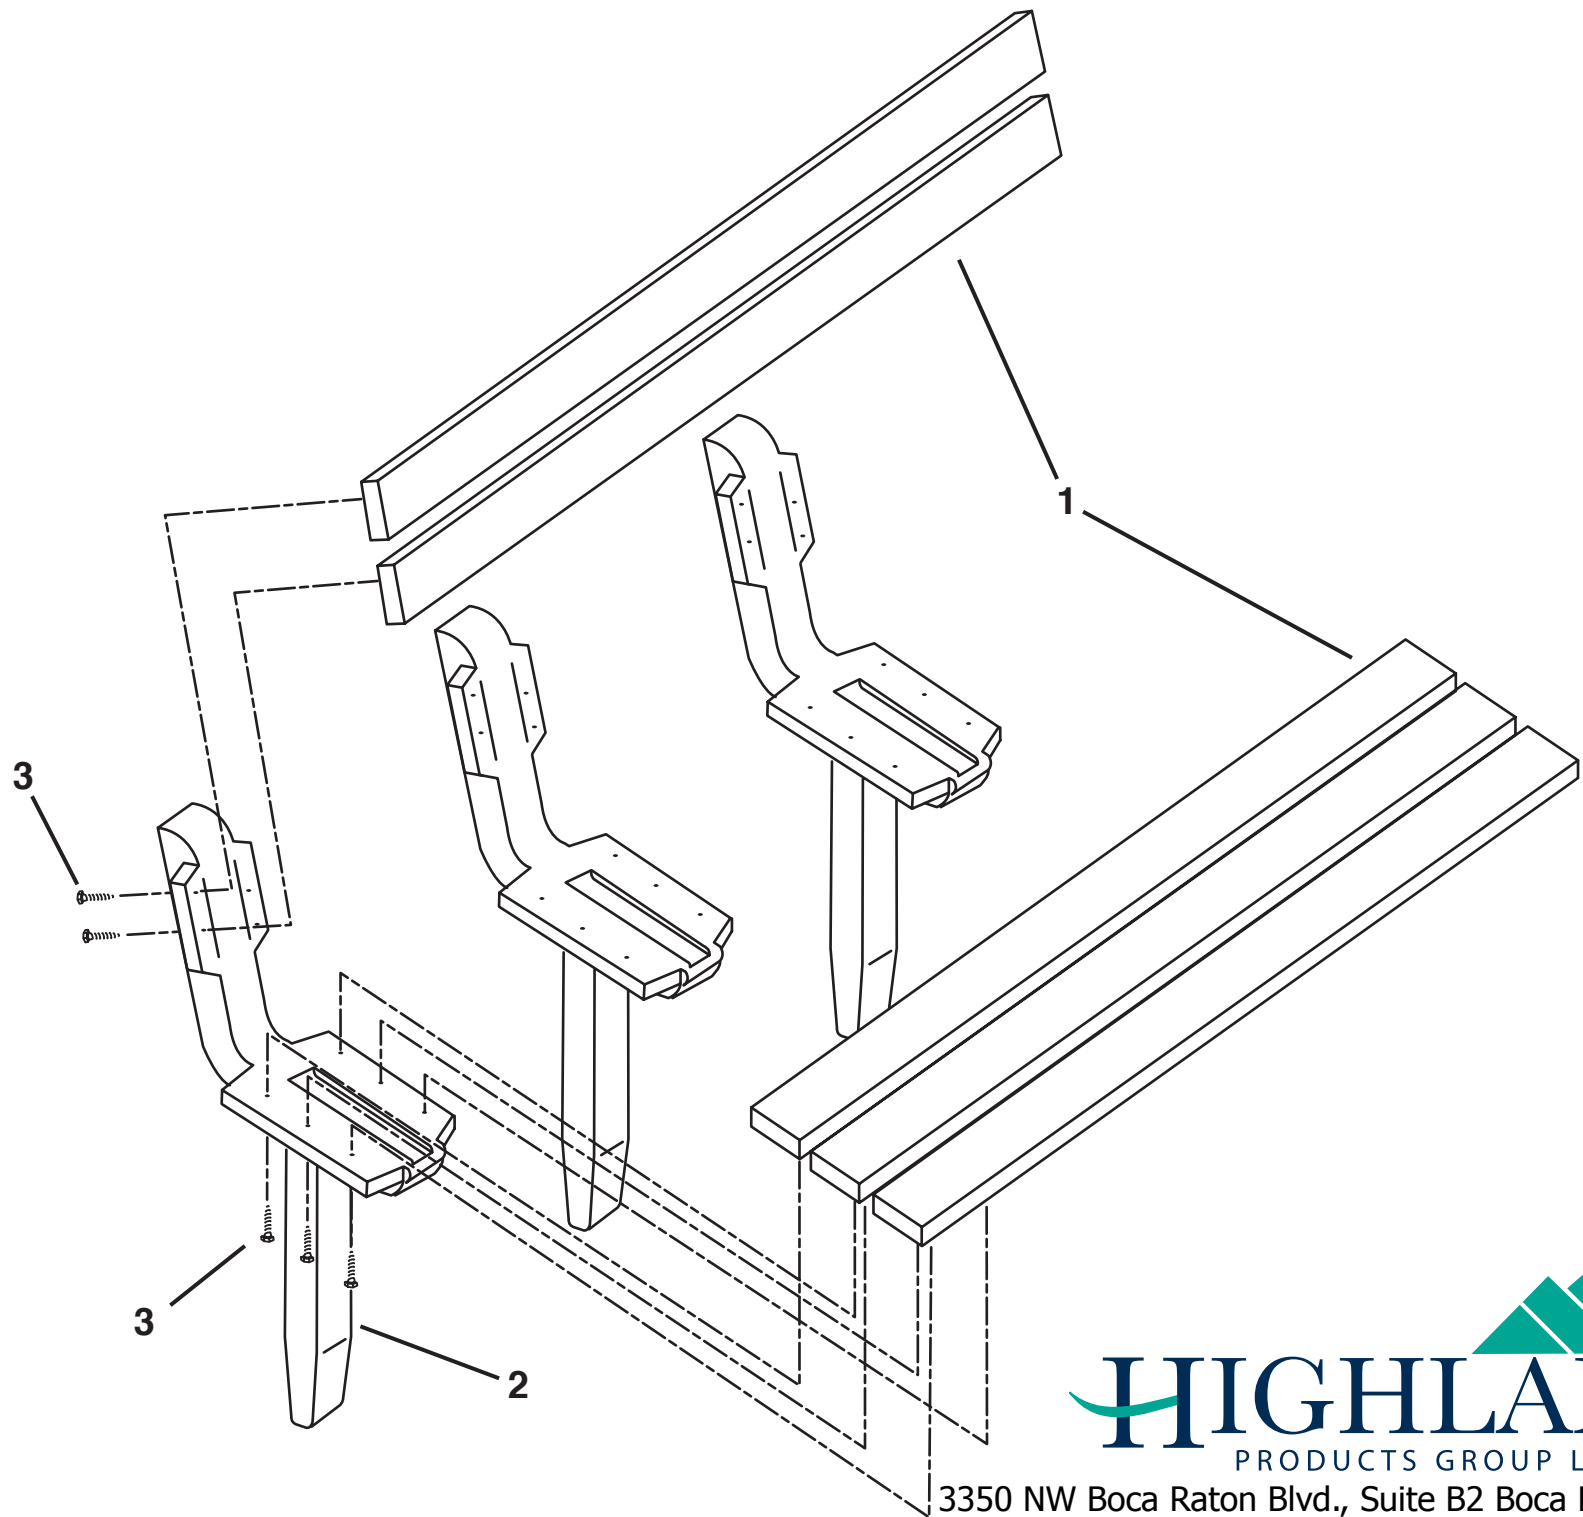

3350 NW Boca Raton Blvd., Suite B2 Boca Raton, FL, 33431  
Phone: 561.620.7878 Fax: 561.620.8668