



## 347-1059

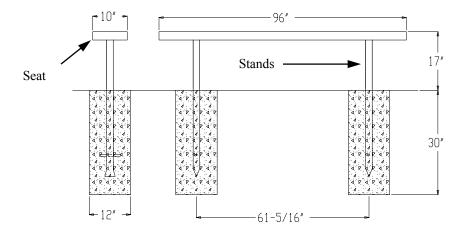

- 1 Drill plastic out of the mounting holes on the stands and the seat using a 7/16" dia. drill bit.
- 2 Attach seat to stands with 3/8" x 1-1/2" SS hex bolts, washers and nuts.
- 3 Secure in concrete footing as shown.



## **347 Series Color Choices**

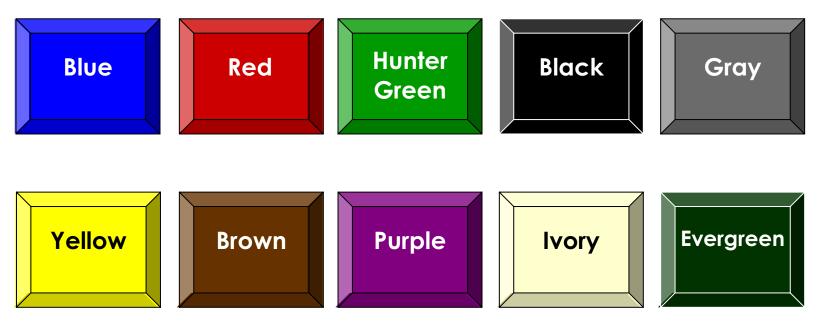

Colors shown may vary slightly from actual product. Custom colors available