

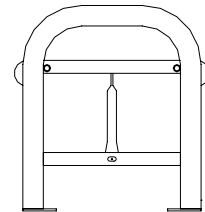


347-1090









**6' FLAT CONTOUR  
BENCH FSSM**

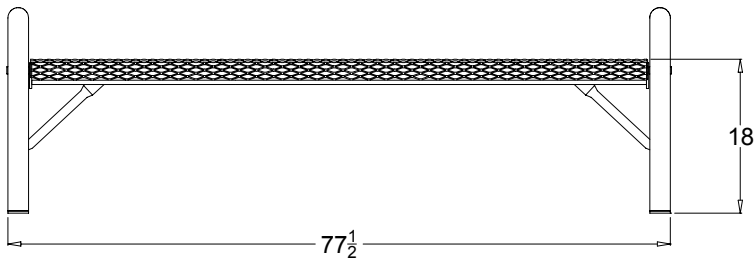

- 
- 1 Drill plastic out of the mounting holes on the stands, seat and braces using a 7/16" dia. drill bit.
  - 2 Fasten the seat to the stands loosely and then fasten the braces to the stands and seat.
  - 3 Set on a level surface and tighten all of the bolts.

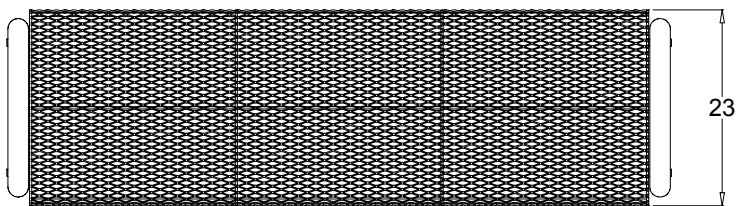

## **347 Series Color Choices**

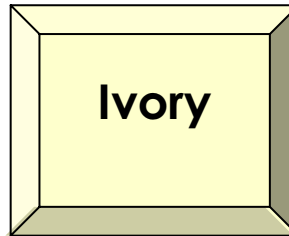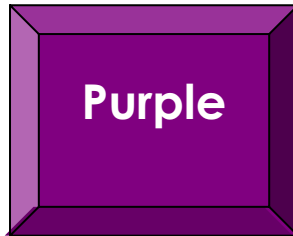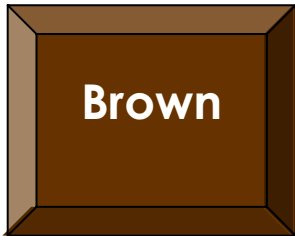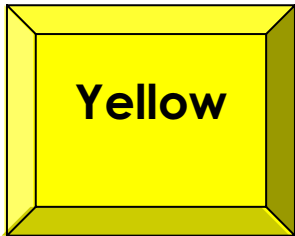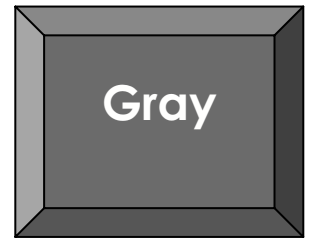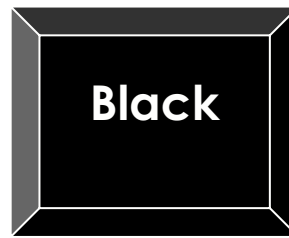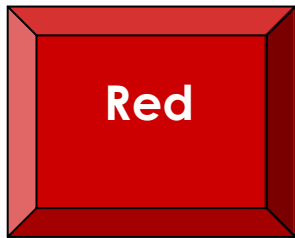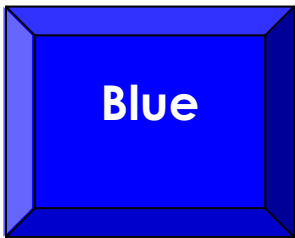

**Colors shown may vary slightly from actual product. Custom colors available**