


347-1101









**BIKE RACK
4 LOOP DIRECT BURY**

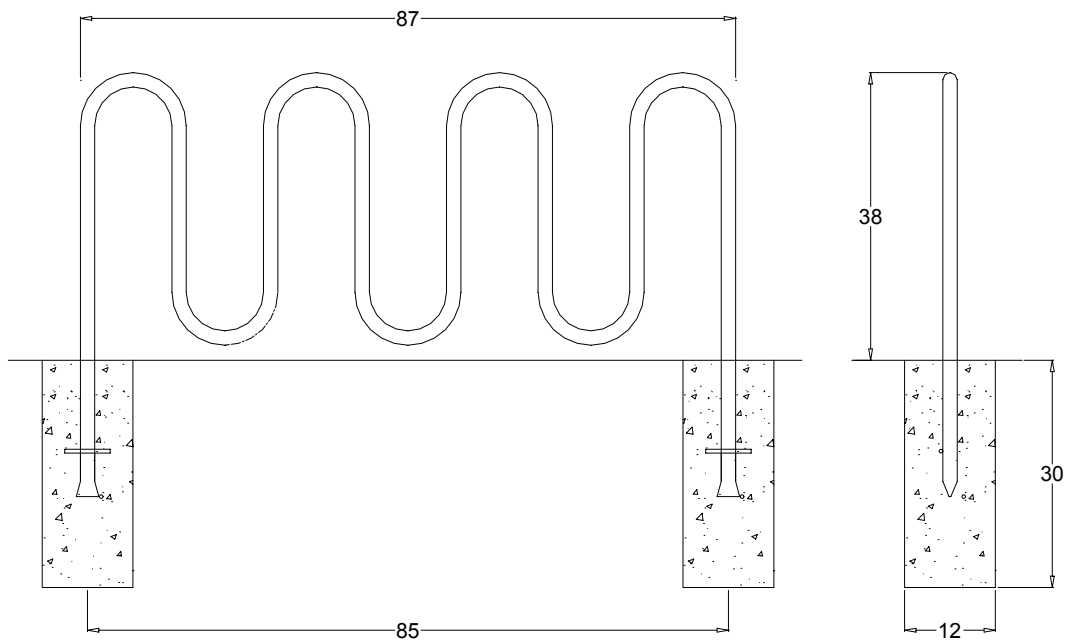

- 1 Use bike rack to locate ground hole location. *(The 85" dimension may vary.)*
- 2 Drill holes in ground as shown.
- 3 Support the bike rack in the holes and fill the holes with concrete.
- 4 Remove the supports after the concrete has set.



347 Series Color Choices

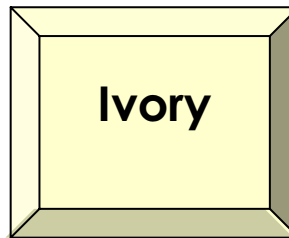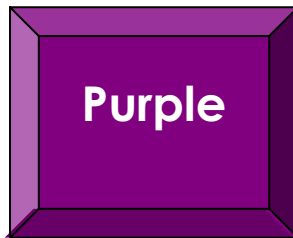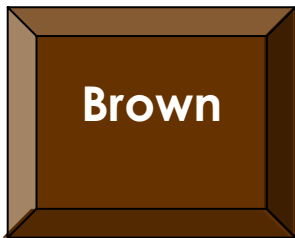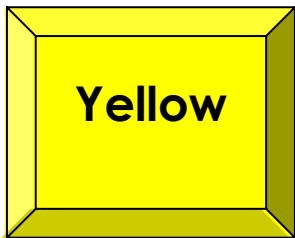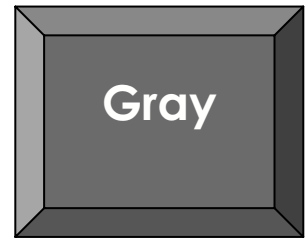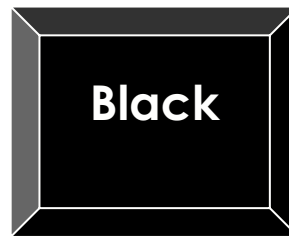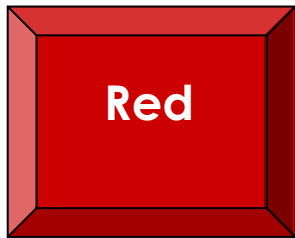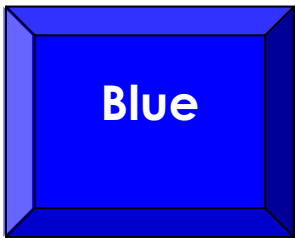

Colors shown may vary slightly from actual product. Custom colors available