

347-1105



Key









- 1. Can Side
- 2. Lid
- 3. Roof
- 4. Base
- 5. Hardware Package

1. With a 7/16" drill bit, drill out the holes of the sides, roof, lid, and base.
2. Making sure the smooth finished sides of the can side are out, stand two of the sides vertically and connect the angle mount of one side, and the flat mount of the other with the nuts, washers, and 3/8"x1-1/2" bolts. Leave the bottom holes open, they will be used to mount the sides to the base once the assembly is complete.
3. Repeat this process with the remaining two sides.
4. Connect the two assemblies to each other in the same manner as step two, creating a box.
5. Place the box into the base aligning the bottom holes with the holes of the base. Bolt the two pieces together.
6. Complete the top assembly by aligning the holes of the roof with the holes in the lid and bolt together with the nuts, washers, and 3/8"x1-1/4" bolts.
7. Place the lid over the side assembly.
8. There is a chain loop mounted to the inside of the lid and base if a security chain is required





347 Series Color Choices

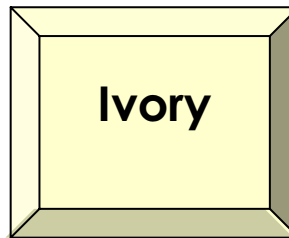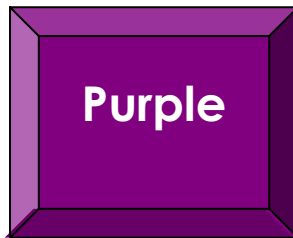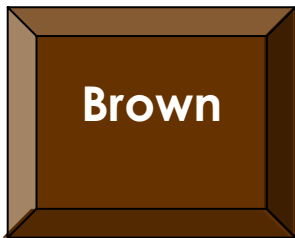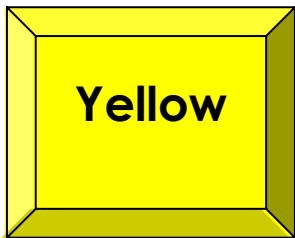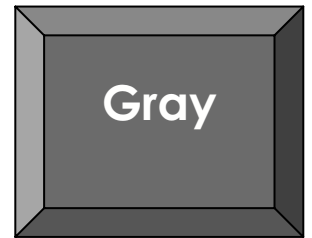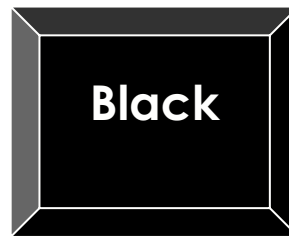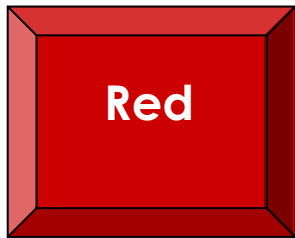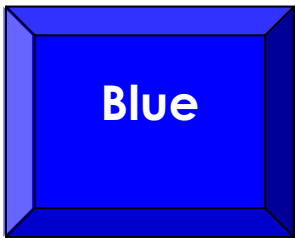

Colors shown may vary slightly from actual product. Custom colors available