


Specifications

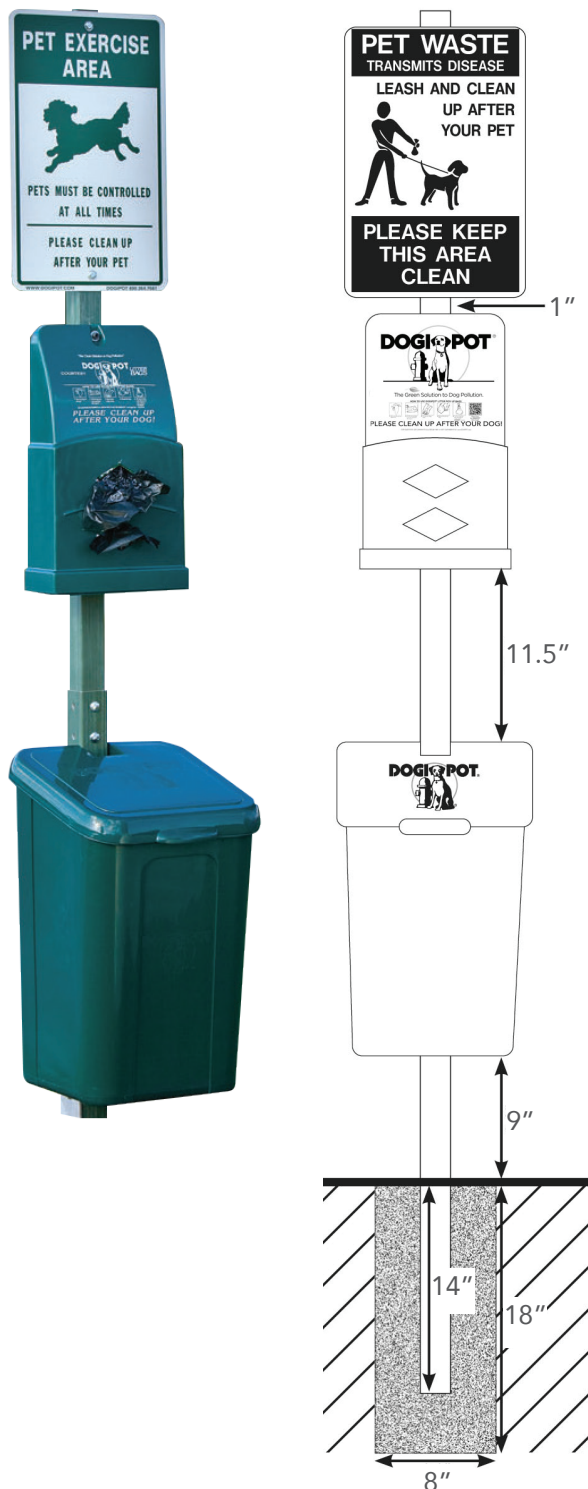

Product Details:

Mounting Hardware:	<p>Poly Pet Waste Sign</p> <ul style="list-style-type: none"> • 2 Tap bolts - 2-1/2 x 1/4 • 2 Washers • 2 Locknuts <p>Poly Bag dispenser:</p> <ul style="list-style-type: none"> • 1 Shoulder Bolt - 2-1/4" x 1/4" • 1 Bolt - 2-1/2" x 1/4" • 1 Washer • 1 Locknut
Keys:	2 for front access Tray / Insert.
Bags:	2 Rolls. Refills will need to be ordered.
Poly Trash Receptacle:	<ul style="list-style-type: none"> • 10 Gallon • With attachable lid with: 2 - Bolt - 2 3/4" x 1/4" 1 - Washer 1 - Locknut
Trash Can Liner Bags:	1 - 50 count box included. Order Refills when needed.
Total Ship Weight:	36 lbs (Mounting Hardware Included)



Product Details:

Dimensions:	18"h x 11.5"w
Weight:	1.35 lbs
Coatings	<ul style="list-style-type: none"> • 14 gauge reflective aluminium • Forest Green on white.




Product Details:

Dimensions:	17" h x 10" w x 3" d
Weight:	5 lbs
Bags:	400 bag capacity
Materials:	2.5 mm ABS / PP forest green polyethylene
	<ul style="list-style-type: none">• Two diamond shaped bag dispenser slots• Bottom Locking access tray / insert• Clearly posted instructions

**Subject to change without notice*


Specifications

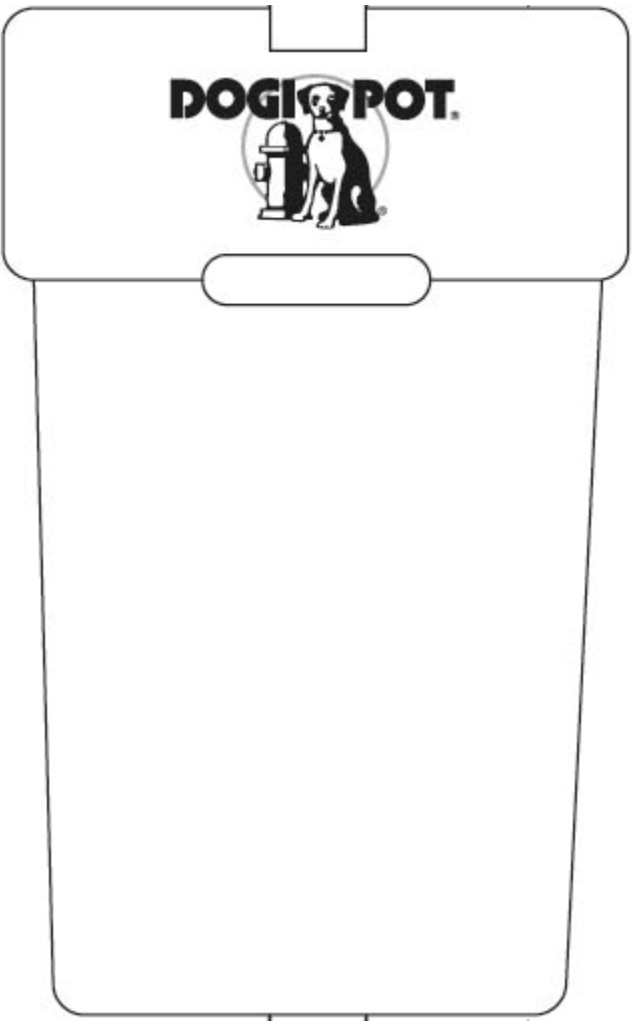

Product Details:

Dimensions:	21" h x 13" w x 12" d
Weight:	4 lbs
Bags:	One (1) box 50 count
Materials:	2.5mm ABS/ PP forest green polyethylene
	<ul style="list-style-type: none">• 10 gallon capacity• Attached hinged lid

**Subject to change without notice*

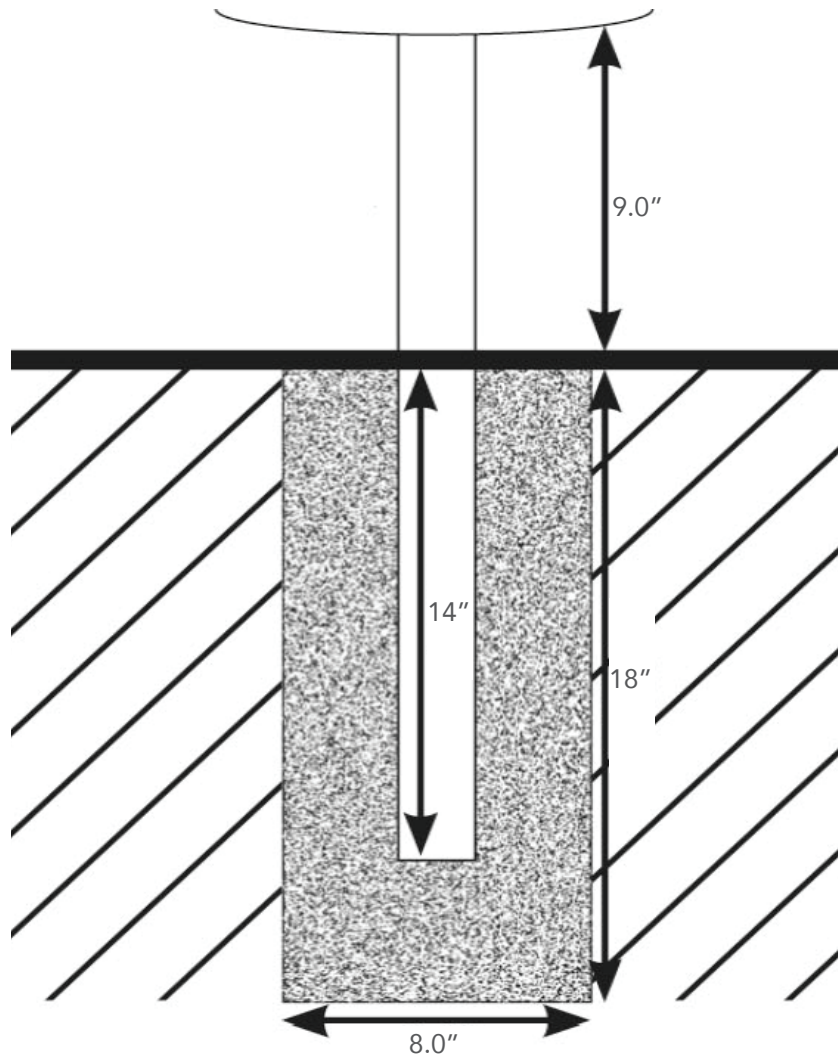

Telescopic Poly Mounting Post:

Dimensions:	2" x 2" x 8'
Construction:	.125 gauge fiberglass
Weight:	8 lbs
Total height from above ground:	6'.6"
Space between dispenser and sign:	1.0"
Space between receptacle and dispenser:	11.5"
Space between ground and receptacle:	9.0"
Hole:	<ul style="list-style-type: none"> • 18.0" d x 8.0" w • Fill with 40 lbs. "ready to use" cement

1. Select a good visible spot in your community or park where you want to install the **Poly Pet Waste Station w/ Sign**.
 2. Prior to installation, remove the 1 $\frac{3}{4}$ " x 1 $\frac{3}{4}$ " x 4' portion of the mounting post from the 2" x 2" x 4' portion of the mounting post before cementing. **Insert the larger portion of the mounting post (2" x 2" x 4') approximately 14" into an 18" deep by 8" diameter hole filled with a 40 lb. bag of "ready to use" concrete mix.** To stabilize the post while cementing, place a rod, bolt or other device through the two bottom holes, prior to inserting into the ground and cementing. Level the post in a straight vertical position and let concrete dry for at least 12 hours. **(NOTE: the three holes 1 $\frac{1}{2}$ " apart indicate the top of the 2" portion of the post).**
 3. After the concrete is dry, insert the smaller portion of the post (1 $\frac{3}{4}$ " x 1 $\frac{3}{4}$ " x 4') into the larger cemented portion of the post (2' x 2' x 4') until the bottom two holes of the 1 $\frac{3}{4}$ " post are aligned with the upper two holes of the 2" post. **(NOTE: the two holes 1 $\frac{1}{2}$ " apart indicate the bottom of the 1 $\frac{3}{4}$ " post).** Insert the two (2) 2 $\frac{1}{2}$ " x 5/16" carriage bolts through the aligned post holes from front to back and affix the washers and locknuts to fix the telescopic post in position. The total height above ground with both post parts should now be approximately 6'6". **(NOTE: the 4th hole down from the top of the 2" post is for installation of the Poly Pet Waste Station Trash Receptacle).**
 4. Start by installing the **Poly Pet Waste Sign** on top of the 1 $\frac{3}{4}$ " post, with the upper hole matching the most upper hole in the square post using the enclosed 2 $\frac{1}{2}$ " bolts, washers and locknuts. **Continue installing the Poly Pet Waste Bag Dispenser according to the mounting instructions enclosed with the Dispenser,** ensuring that the upper edge of the Dispenser is approximately 1" below the lower edge of the **Poly Pet Waste Station w/ Sign.** **(NOTE: the 2 $\frac{1}{4}$ " x $\frac{1}{4}$ " shoulder bolt is to be installed with an exterior washer in the top mounting hole of the Dispenser. DO NOT OVER TIGHTEN TO AVOID POSSIBLE CRACKING OF Dispenser UNIT).**
 5. Install the **Poly Pet Waste Station Trash Receptacle** through the pre-drilled holes in the back wall of the receptacle and through the square post with the remaining bolts, washers and locknuts. **ATTACH THE LID TO THE WASTE RECEPTACLE PRIOR TO MOUNTING.** Use the 2" fender washers for installation on the inside of the receptacle. The upper edge of the trash receptacle must be approximately 11.5" below the lower end of your **Poly Pet Waste Bag dispenser.** The trash receptacle lid will open to a pre-determined angle to prevent it from being over extended. The receptacle lid will hit the post when it is fully opened.
 6. Insert one of the enclosed **Poly Pet Waste Bags** into the trash receptacle, folding it over the edge of the receptacle and close the trash receptacle lid.
- 7. ENJOY WATCHING PET OWNERS PICK UP AFTER THEIR DOGS!**