

ST. PETE BENCH 6 FT. SURFACE MOUNT



TOOLS REQUIRED: 9/16" SOCKET
RATCHET OR POWERED DRIVER

M A T E R I A L S



(3) METAL BASES



(7) 6 FT FLAT SLATS
(2) 6 FT BULLNOSE SLATS



(6) CONCRETE WEDGE ANCHOR




(27) 3/8" X 16 X 2 1/2"
CARRIAGE BOLTS



(27) 3/8" NYLON LOCK
NUTS

I N S T R U C T I O N S

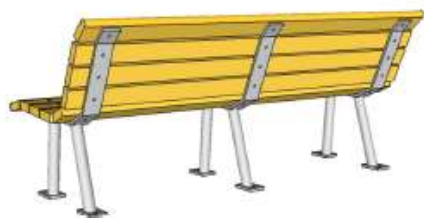

1. Verify all parts and hardware before beginning. Assemble on a flat level surface.
2. Space bases apart at appropriate length, aligning with pre-drilled holes in bench slats.
3. Fasten the slats to the bases using the supplied bolts and nuts. The bullnose slats are for the top and bottom. Do not overtight as this might effect the integrity of the products.
4. The finished bench must be securely fasten to a solid surface using the included wedge anchors for concrete or use appropriate hardware for other surfaces.