509-2044 ROUND RACK (Galvanized)





Simple. Stylish. Secure.

Clean lines and simple functionality make The Park and Facilities Catalog Round Rack welcome addition to bike parking. Much like a Hoop Rack, but with a more stylish appearance, the The Park and Facilities Catalog Round Rack enhances public spaces while providing secure parking for two bikes.



ROUND RACK

YOUR LOGO HERE

Customize the Round Rack and brand your bike parking









FINISH OPTIONS



Galvanized



MOUNT OPTIONS

Surface





Powder Coat

White	Black	Light Gray RAL 7042	Deep Red RAL 3003	Yellow RAL 1023
CNH Bright Yellow	Orange	Blue	Sky Blue	Hunter Green
	RAL 2004	RAL 5005	RAL 5015	RAL 6005
Light Green	Green	Sepia Brown	Bronze	Silver
RAL 6018	RAL 6016	RAL 8014		9007

Thermoplastic


Black	Green	Red	Blue	Gray	Brown

theparkand facilities


C. A. T. A. L. O. G.

ROUND RACK 509-2044

Submittal Sheet

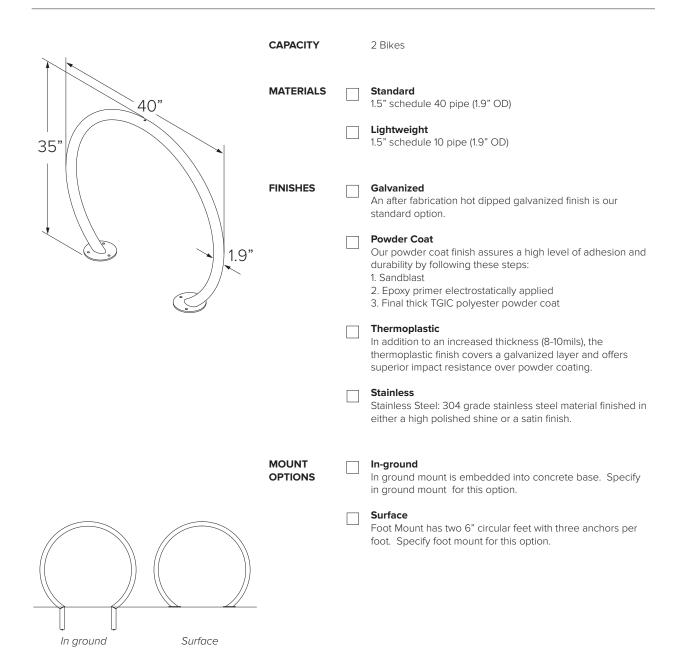



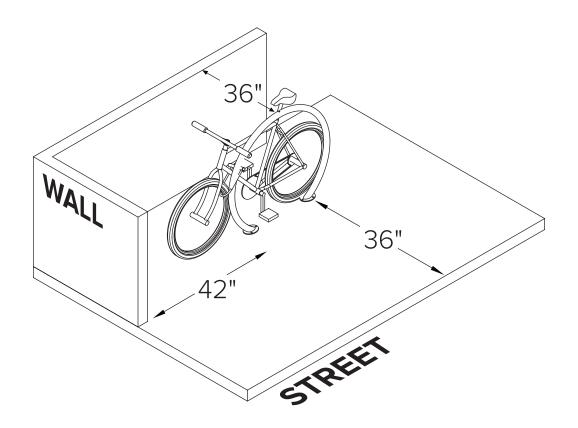

ROUND RACK

Installation Instructions — Surface Mount


TOOLS NEEDED

Tape Measure Marker or Pencil Masonry Drill Bit Drill (Hammer drill recommended) Hammer Wrench 9/16" Level

RECOMMENDED BASE MATERIAL

Solid concrete is the best base material for installation. To ensure the proper anchors are shipped with your rack, ask your Park and Facilities Catalog representative which anchor is appropriate for your application. Be sure nothing is underneath the base material that could be damaged by drilling.



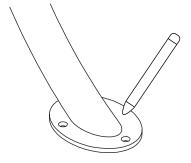

Place the rack in the desired location. Use a marker or pencil to outline the holes of the flange onto the base material.






Drill 3/8" diameter holes 3" deep into surface. Make sure the holes are at least 3" away from any cracks in the base material.





Place rack (and washers to level rack if necessary) over holes.



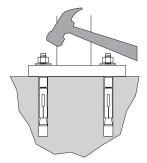

Thread nuts onto anchors, leaving approximately 1/4" of the anchor protruding, and tap into surface. Tighten nuts down to secure rack.



ROUND RACK

Installation Instructions — In Ground Mount

TOOLS NEEDED


Level Cement mixing tub Shovel Trowel

Hole coring machine with 4" bit Access to water hose Materials to build brace (see "Install Tip" at bottom of page)


INSTALLING INTO EXISTING SIDEWALK

Core holes no less than 3" diameter (4" recommended) and 10" deep into sidewalk. Fill holes with Por-Rok or epoxy grout. Place rack into holes, making sure the rack is level. 33"-36" of the rack should remain above the surface. If the rack is less than 33" high, it will not support the bike adequately. Make sure the rack is level and held in place until the grout has set.


INSTALLING INTO A NEW SIDEWALK

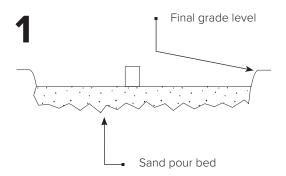


Place corrosion resistant sleeve (min. 3" inside diameter) in sand pour bed in exact location where rack will be installed. Make sure top of sleeve is at same level as desired finished concrete surface. Fill sleeve with sand to keep it in place and prevent it from filling with concrete.



After appropriate cure time, dig out sand from sleeves and insert racks, making sure they are level and at the appropriate height. Pour in Por-Rok or epoxy grout and allow to set.

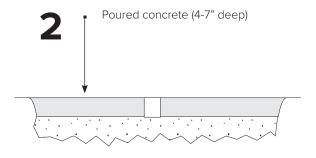

Pour concrete and allow to cure.

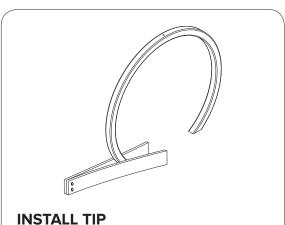

An easy way to brace the rack while the grout sets is to bolt two 1x4" boards together at one end and clamp them onto the rack like a clothes pin.

