


Brooklyn Bench 6'

TOOLS REQUIRED: 7/16" SOCKET



Lag Screws - (27)

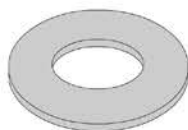


Washer - (27)



Base Component - (3)




2" x 4" x 6' Bullnose - 2 Hole Pattern (2)

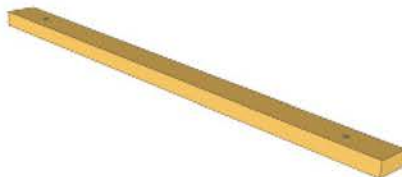

2" x 4" x 6' - 1 Hole Pattern (3)



2" x 3" x 6' - 1 Hole Pattern (2)

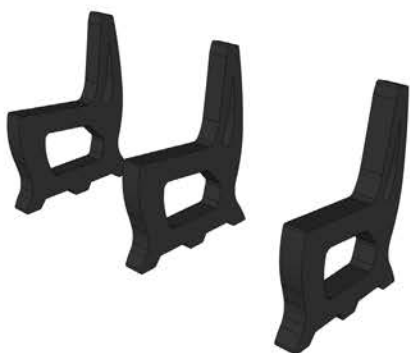

1. Verify all parts and hardware before beginning. Assemble on a flat level surface.

2. Place washers on the zinc plated lag screws and start them in the pilot holes on the bench slats. Run the lag screws through the pilot holes in the slats letting them extend through approximately 1/4".



3. Place the 2 Hole Pattern Slats on the supports and line up the screws with the pre drilled holes in the supports. Start with one of the front boards and then one on the top boards (to allow you to get the bench square). Finish with the remaining bench supports in any order.



4. Using the 7/16" socket tighten the lag screws securing the slats and the supports.

5. DO NOT OVERTIGHTEN THE LAG SCREWS! THIS MAY CAUSE THE PLASTIC BENCH SUPPORTS TO STRIP OUT!