

# BIKE BIKE RACK



## Make A Statement

The Bike Bike Rack is an eye-catching, functional piece of street art. It welcomes people on bikes and provides them a secure, convenient place to park.

**thepark** AND FACILITIES  
CATALOG

[www.theparkcatalog.com](http://www.theparkcatalog.com) Ph: 1-866-280-9894

# BIKE BIKE RACK

## YOUR LOGO HERE

Customize the Bike Bike Rack and brand your bike parking



## FINISH OPTIONS

Galvanized



Stainless




Powder Coat


White	Black	Light Gray RAL 7042	Deep Red RAL 3003	Yellow RAL 1023
CNH Bright Yellow	Orange RAL 2004	Blue RAL 5005	Sky Blue RAL 5015	Hunter Green RAL 6005
Light Green RAL 6018	Green RAL 6016	Sepia Brown RAL 8014	Bronze	Silver 9007
Dark Purple	Flat Black	Wine Red RAL 3005	Beige RAL 1001	Iron Gray 7011

## MOUNT OPTIONS

Surface

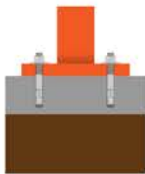


In-Ground

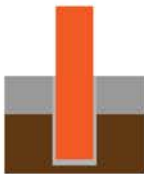



# BIKE BIKE RACK

## Submittal Sheet

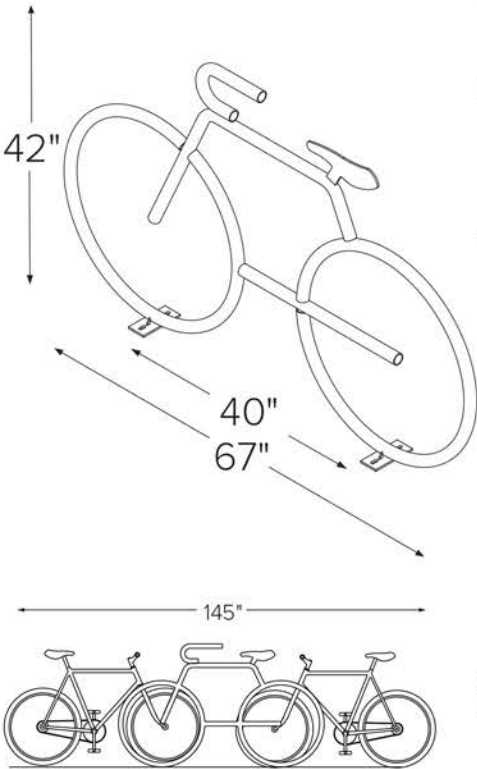


**CAPACITY** 2-4 Bikes


**MATERIALS** 1.5" OD 11 Gauge Tube. All open ends are capped to prevent moisture from entering. All welds are MIG welds around entire circumference of joined pieces.

- FINISHES**
- ☐ **Galvanized**  
An after fabrication hot dipped galvanized finish is our standard option.
  - ☐ **Powder Coat**  
Our powder coat finish assures a high level of adhesion and durability by following these steps:  
1. Sandblast  
2. Epoxy primer electrostatically applied  
3. Final thick TGIC polyester powder coat
  - ☐ **Stainless**  
Stainless Steel: 304 grade stainless steel material finished in either a high polished shine or a satin finish.

- MOUNT OPTIONS**
- ☐ **In-ground**  
In ground mount is embedded into concrete base. Specify in ground mount for this option.
  - ☐ **Surface**  
Each rack has two 2.5" x 6" mounting brackets double gusset welded to the "wheels". The brackets are 40" apart. Each bracket is anchored to the ground with two anchors. Anchors are included with each rack.

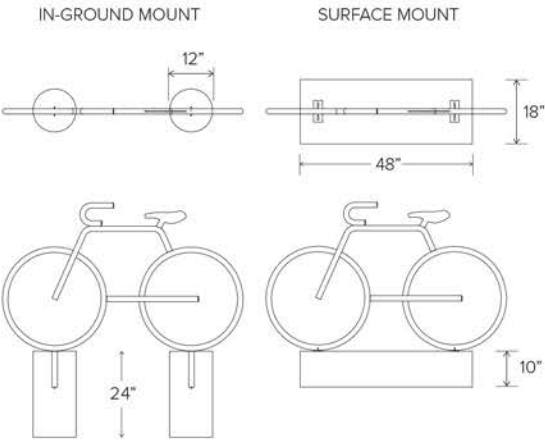

**BIKE BIKE RACK**  
Setbacks

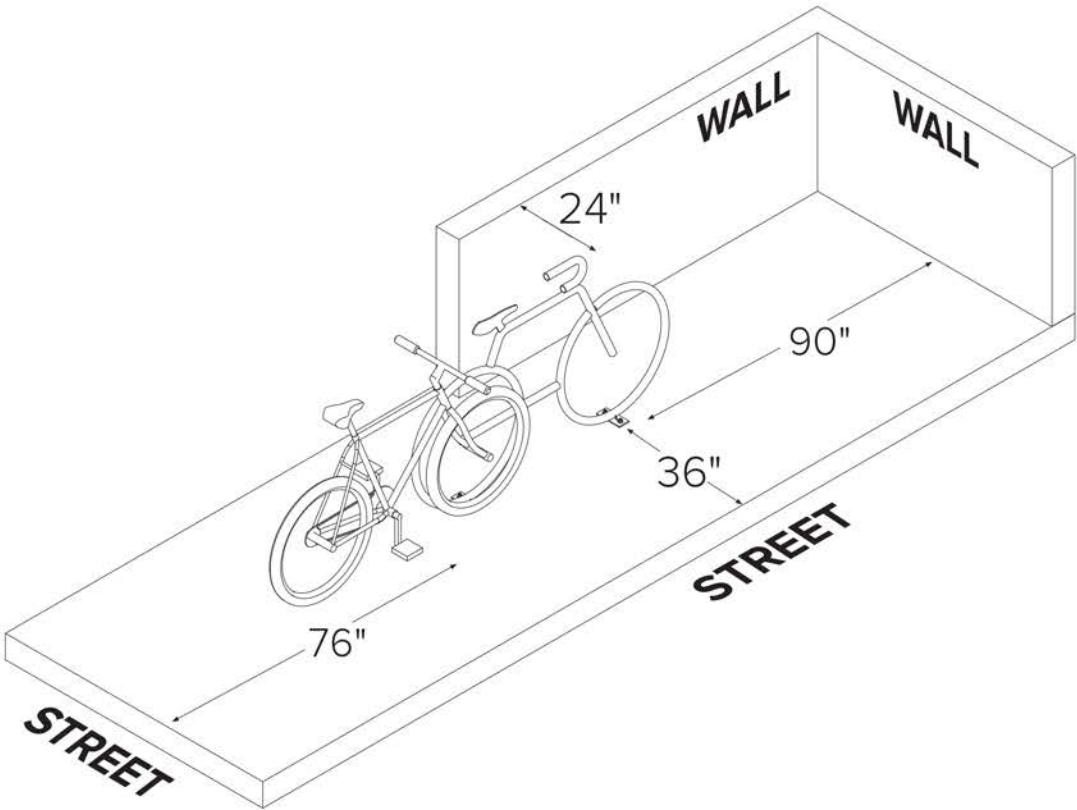

## BIKE BIKE RACK

# Installation Instructions – Surface Mount

---


### TOOLS NEEDED

Tape Measure  
Marker or Pencil  
Masonry Drill Bit  
Drill (Hammer drill recommended)  
Hammer  
Wrench 9/16"  
Level

### RECOMMENDED BASE MATERIAL


Solid concrete is the best base material for installation. To ensure the proper anchors are shipped with your rack, ask your representative which anchor is appropriate for your application. Be sure nothing is underneath the base material that could be damaged by drilling.

**1**

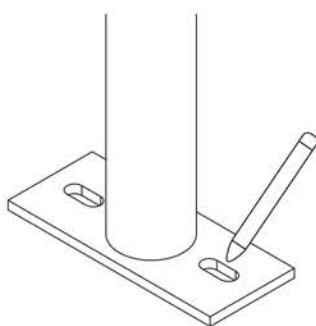


Place the rack in the desired location. Use a marker or pencil to outline the holes of the flange onto the base material.

**2**

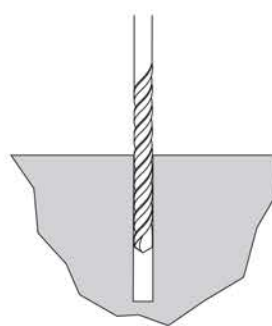


Drill 3/8" diameter holes 3" deep into surface. Make sure the holes are at least 3" away from any cracks in the base material.

**3**

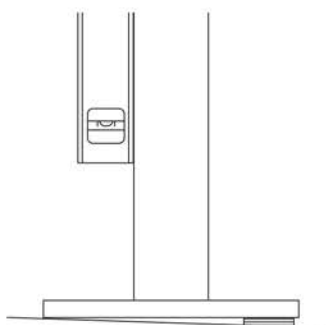

Place rack (and washers to level rack if necessary) over holes.

**4**

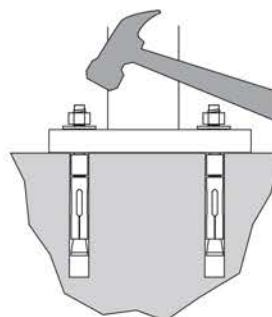

Thread nuts onto anchors, leaving approximately 1/4" of the anchor protruding, and tap into surface. Tighten nuts down to secure rack.

**BIKE BIKE RACK**

Installation Instructions – In Ground Mount


**TOOLS NEEDED**

- Level
- Cement mixing tub
- Shovel
- Trowel
- Hole coring machine with 4" bit
- Access to water hose
- Materials to build brace (see "Install Tip" at bottom of page)


**INSTALLING INTO EXISTING SIDEWALK**

Core holes no less than 3" diameter (4" recommended) and 10" deep into sidewalk. Fill holes with Por-Rok or epoxy grout. Place Bike Bike Rack into holes, making sure the rack is level. 33"-36" of the Bike Bike Rack should remain above the surface. If the Bike Bike Rack is less than 33" high, it will not support the bike adequately. Make sure the rack is level and held in place until the grout has set.


**INSTALLING INTO A NEW SIDEWALK**

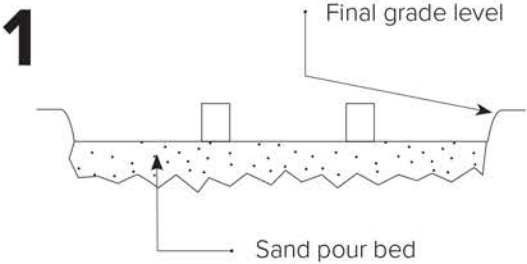


Place corrosion resistant sleeve (min. 4" inside diameter) in sand pour bed in exact location where rack will be installed. Make sure top of sleeve is at same level as desired finished concrete surface. Fill sleeve with sand to keep it in place and prevent it from filling with concrete.

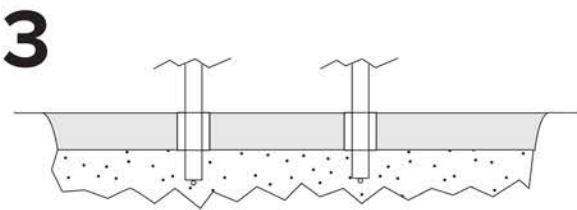

After appropriate cure time, dig out sand from sleeves and insert racks, making sure they are level and at the appropriate height. Pour in Por-Rok or epoxy grout and allow to set.

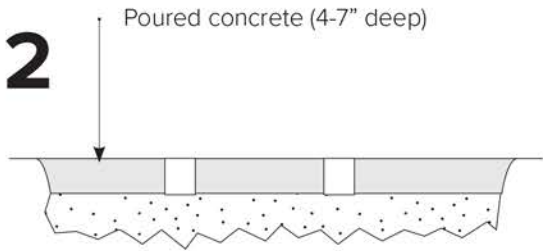

Pour concrete and allow to cure.

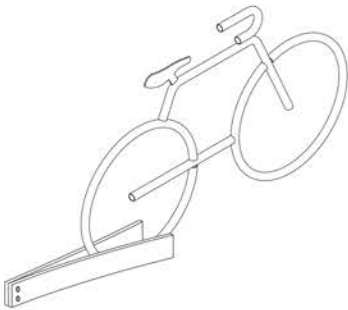

**INSTALL TIP**

An easy way to brace the Bike Bike Rack while the grout sets is to bolt two 1x4" boards together at one end and clamp them onto the legs of the Bike Bike Rack like a clothes pin.