

6' OVAL SEAT WITHOUT BACK SURFACE MOUNT

Model No. 347-1072

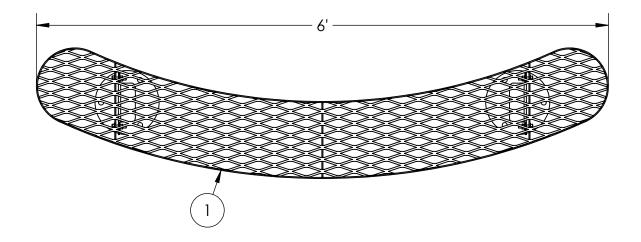

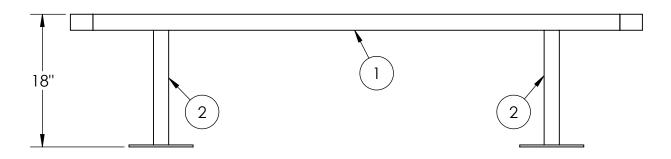

- 1. Drill plastic out of the mounting holes on the stands and seats using a 7/16" diameter drill bit.
- 2. Attach seat to the stands with fixings provided and tighten up.
- 3. Stand the bench in its final location and mark out base holes.
- 4. Move the bench to a safe place and drill holes.
- 5. Place the bench back, level and secure down using appropriate fixings for the flooring material.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	622-E13	6' Champion Oval Seat	1
2	633-011	Bench Stand Without Back	2
3	516-058	3/8"x1-1/2" SS Hex Bolt	4
4	516-023	3/8" SS Flat Washer	8
5	516-028	3/8" SS Nylock Nut	4

6' OVAL SEAT WITHOUT BACK SURFACE MOUNT



Tools List

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Imapct Gun (Optional)
- Drill



The Park and Facilities Catalog

220 Congress Park Dr. #215 Delray Beach, FL 33445 www.theparkcatalog.com Ph: 800-695-3503

Periodic check of bolts tightness reccommended