




**Heritage Recycled Plastic Bench With Back - 4 Ft.  
289-4011**

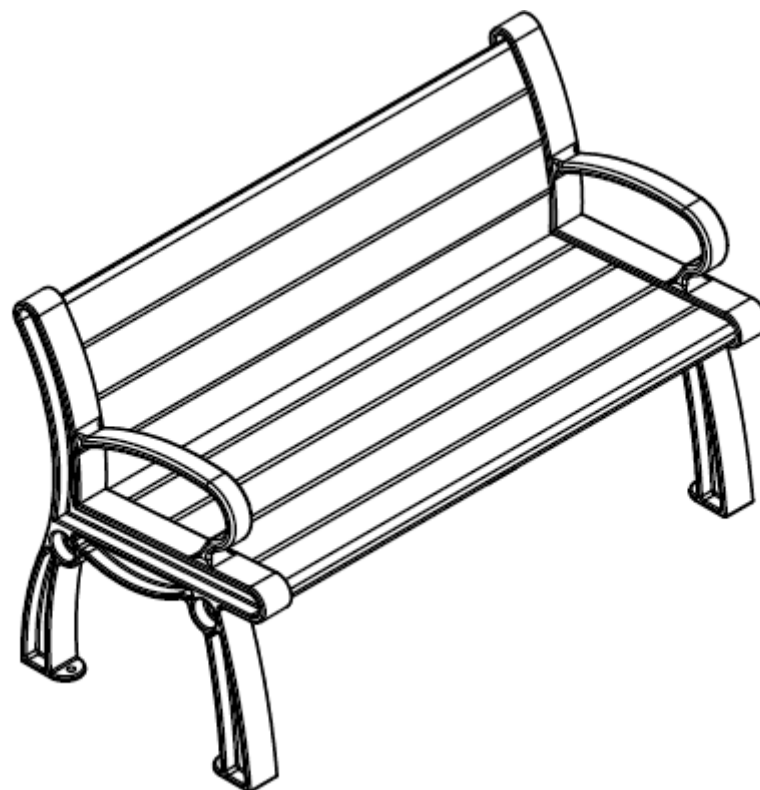


**Dimensions**

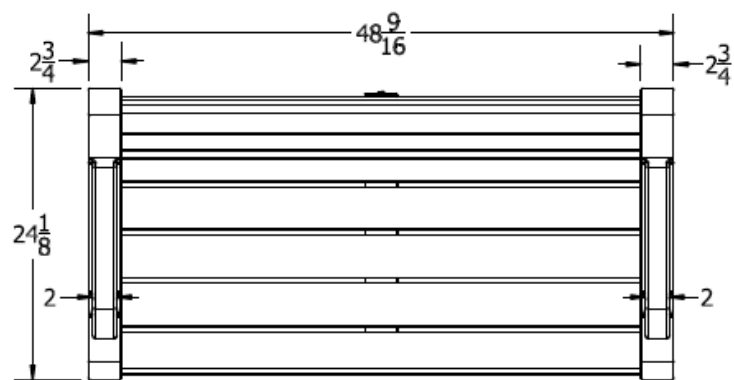

TOP VIEW

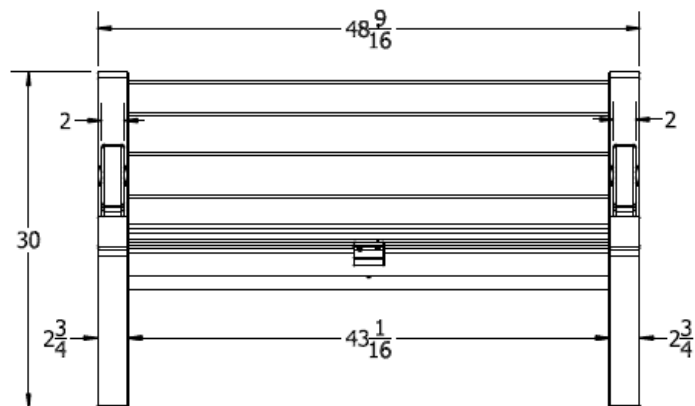

FRONT VIEW

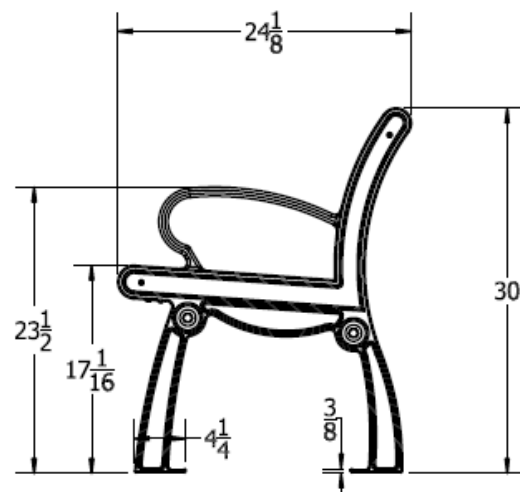


SIDE VIEW

**Components**


Tools for Assembly: Powered driver and Phillips Head Bit  
Ratchet and 11/16" Socket



(2) Bench Ends

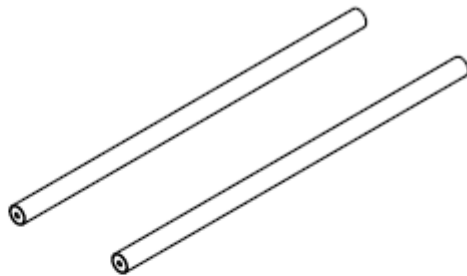

(2) Support Rods

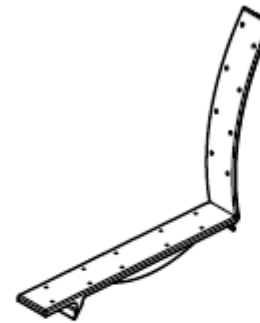


(1) Back & Seat Brace



(4) Hex Head Bolts  
(4) 1 1/2" Long Screws  
(18) 1 1/4" Long Screws  
(4) Concrete Anchors




(2) Bullnose Slats

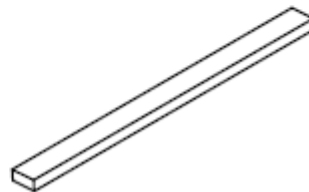

(7) Seat & Back Slats

**Assembly Instructions**


Before you begin: Check components to verify all are included. Assembly will require two people and must be performed on a level and smooth surface. Do not overtighten hardware as damage can occur.

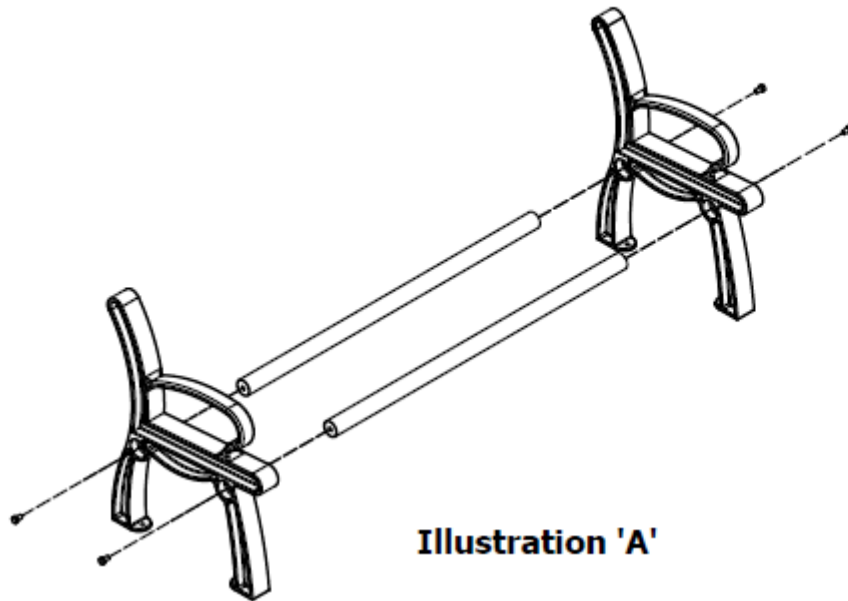

**Step 1**

Loosely attach support rods to side frames using hex head bolts. See Illustration 'A'.

**Assembly Instructions Cont.**

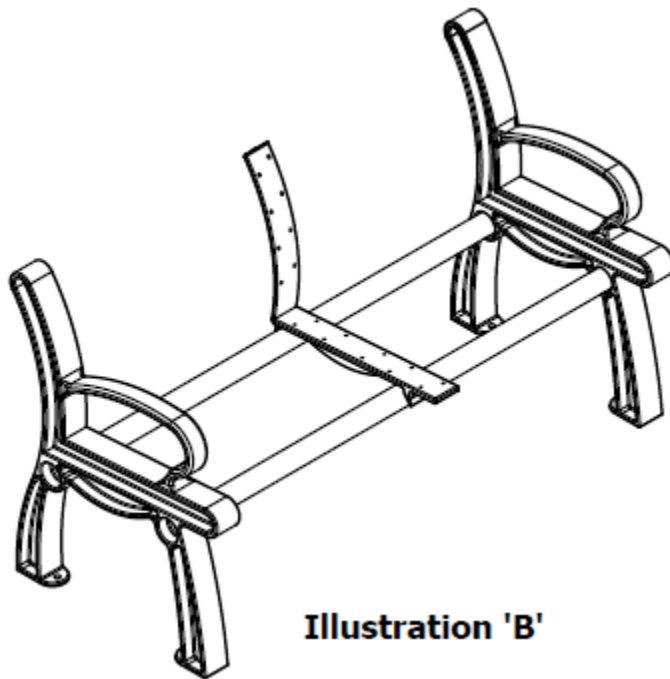


**Illustration 'B'**

**Step 2**

Place the seat & back brace centered on the cross support rods, See illustration 'B'. Note - It is necessary for a second person to assist with this step as braces will not stand up on their own.

**Assembly Instructions Cont.**

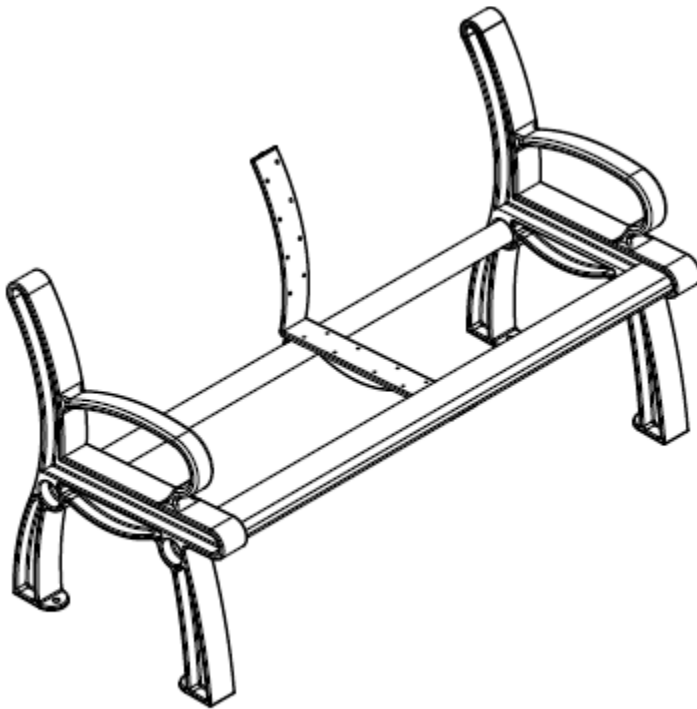


**Illustration 'C'**

**Step 3**

Position the front bullnose seat slat with the rounded edge facing out in the slots of each bench end. See Illustration 'C'.


**Assembly Instructions Cont.**

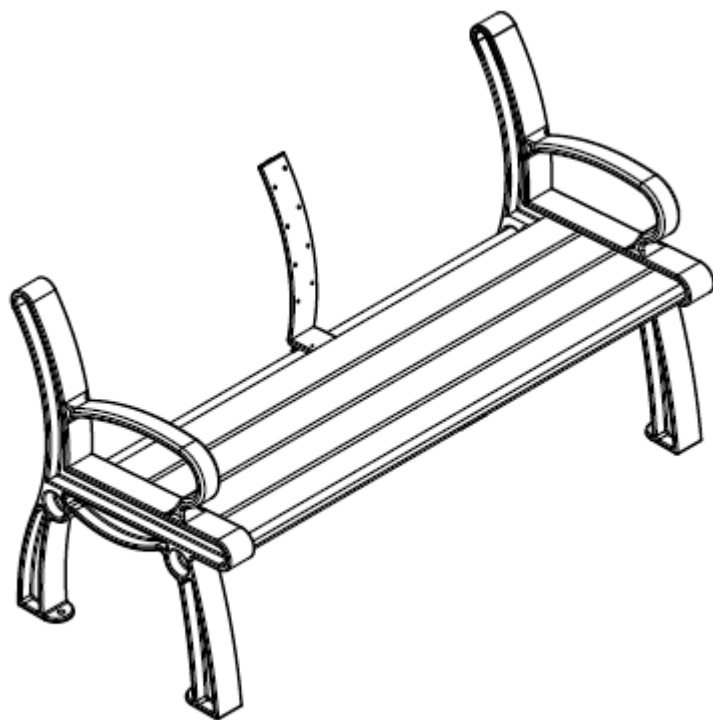

**Illustration 'D'**

Continue inserting the seat slats in the bench ends.  
See Illustration 'D'.

**Assembly Instructions Cont.**

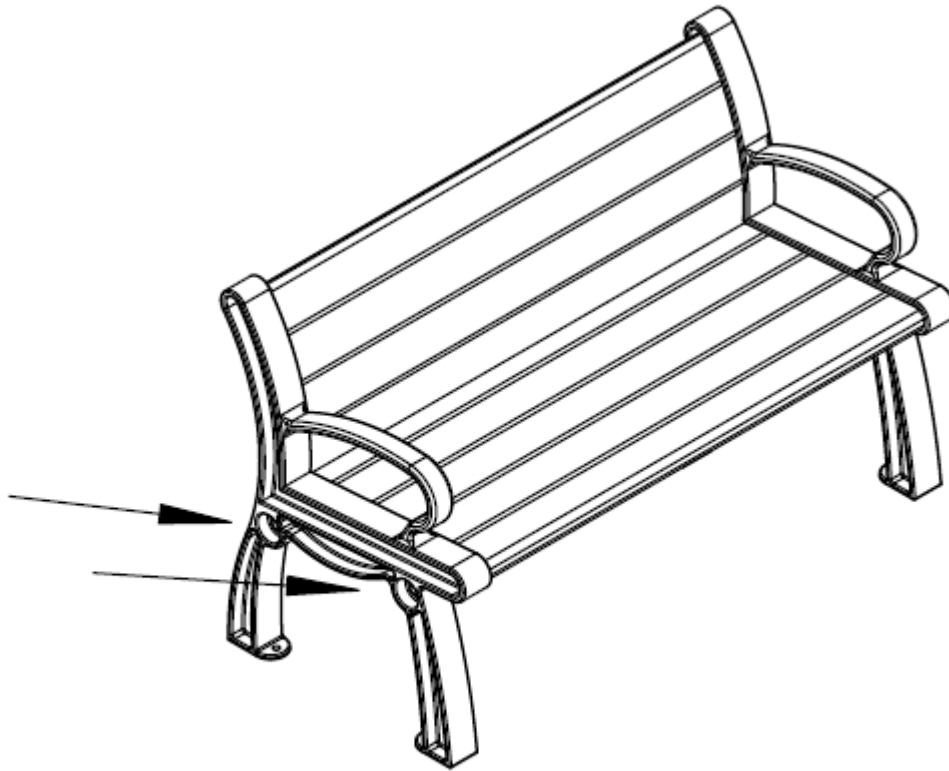


Insert the back slats, the final top slat will be a bullnose with the rounded edge facing up. With all slats in place, tighten the hex head bolts in each bench end previously installed. See Illustration 'E'.

**Illustration 'E'**



**Assembly Instructions Cont.**

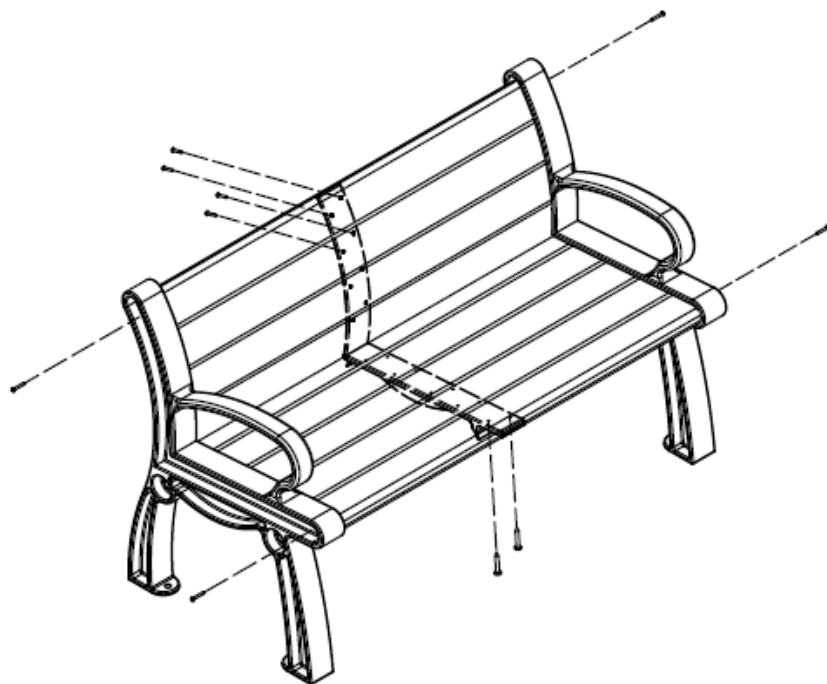

**Illustration 'F'**

**Step 4**

Attach the back & seat brace to the backside of the slats using 1 1/4" screws at the pre-drilled holes or slots of the brace. Secure the bench ends to the upper and lower bullnose slats with the 1 1/2" screws through the pre-drilled holes of the side frames. See Illustration 'F'.

The assembled bench can be securely fastened to a solid surface using the included wedge anchors for concrete or other appropriate hardware.

**Cleaning Tips**

The Park Catalog products are durable and designed to last a lifetime, like most things that spend the majority of time outdoors, sometimes they need a little cleaning. In most cases, all a Park Catalog product requires is mild dish soap, a bucket of warm water and a clean cloth. Apply the soapy mixture to scrub away the dirt and then rinse with water. If you have some stubborn dirt down in the grooves and divots, mix 1 part bleach to 2 parts water, apply with your clean cloth, scrub with a soft bristle brush if needed and then rinse.