


TOOLS REQUIRED: 7/16" SOCKET
DRILL OR SCREW GUN

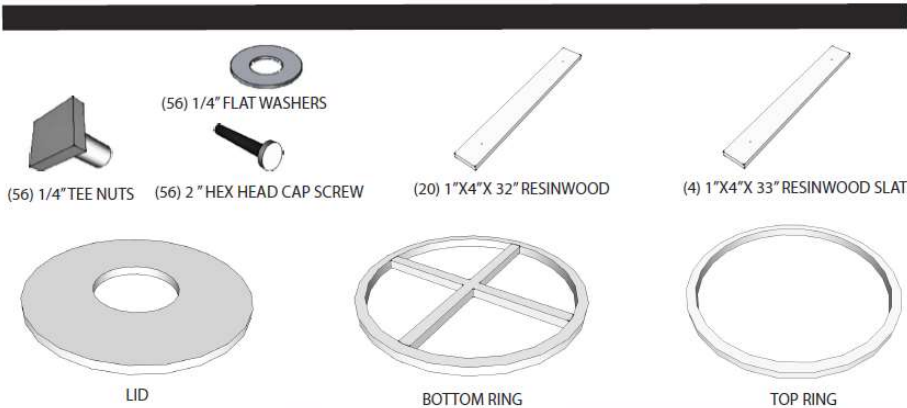

INSTRUCTIONS

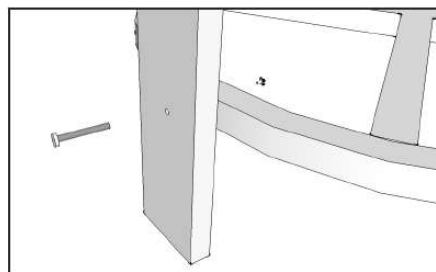


ILLUSTRATION A

1. Check parts list to verify all materials are included.

Before starting, keep in mind that four of the Resinwood slats are longer than the rest to lift the can off the ground. These must be evenly spaced apart with shorter slats between them.

2. Take the bottom plastic ring and begin with one of the longer Resinwood slats. Place the slat on the outside of the ring. Place a bolt through the slat then through the pre-drilled holes in the bottom plastic ring. (Illustration "A")