




NEWPORT BENCH 4 FT

TOOLS REQUIRED: POWERED DRIVER
PHILLIPS BIT


M A T E R I A L S



(2) 3/8" SPACER

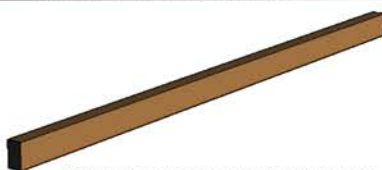

(6) SEAT AND BACK BOARDS

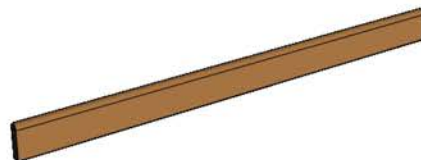

(2) FRONT & TOP BOARDS
WITH ROUNDED EDGE



(1) LEFT SUPPORT (PB 1101)
FROM SEATED POSITION



(1) CENTER SUPPORT (PB 1102)



(1) RIGHT SUPPORT (PB 1103)
FROM SEATED POSITION



(64) 2" SCREWS

I N S T R U C T I O N S

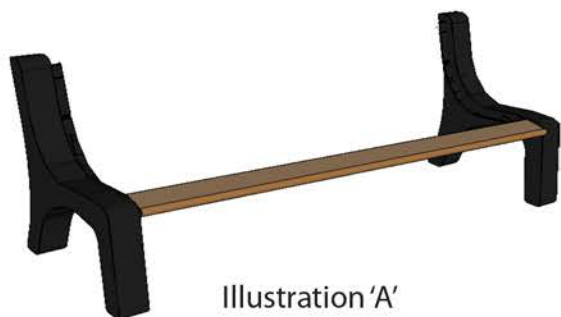


Illustration 'A'

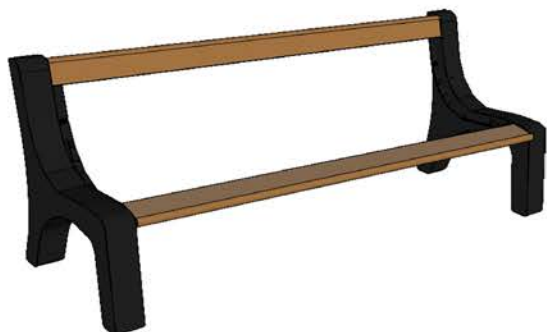


Illustration 'B'

Two people are required to assemble this bench.

CAUTION - DO NOT DRIVE ATTACHMENT SCREWS TOO DEEPLY AS THE SCREW COULD PROTRUDE THROUGH SLAT ON THE SEATING SIDE OF BENCH.

1. Check parts list to verify all materials are included.
2. Have each person hold a bench support upright. Position the front rounded edge board lining it up with each leg support. Working from the underside, attach the front board to the supports by inserting a screw in the pre-drilled holes and driving them into the front board. Do not overtighten. See Illustration 'A'.
3. Repeat the same process for the top rounded edge board, see illustration 'B'



Illustration 'C'

4. Align the center support in the center of the installed boards and attach with screws in the pre-drilled holes. See Illustration 'C'.



Illustration 'D'

5. Beginning with the board directly adjacent to the installed rounded front board, use the enclosed spacer to align and then attach this board with screw in the pre-drilled holes. See illustration 'D'. Repeat this process until all boards have been installed.

Your Newport Bench is now ready for years of enjoyment!