


## **Step-Over Recycled Plastic Picnic Table - 8 Ft. - Double Sided ADA** 133-1060



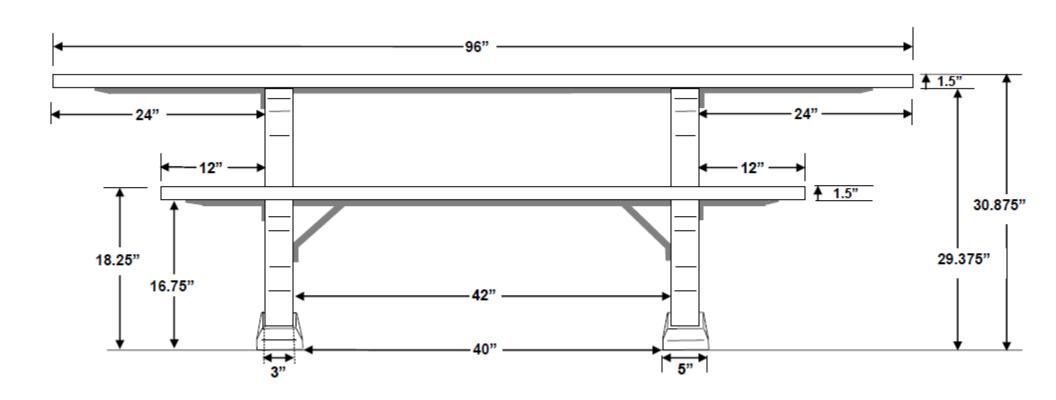

## Step-Over Recycled Plastic Picnic Table - 8 Ft. - Double Sided ADA 133-1060

STEP 1: PLACE THE 2 PICNIC TABLE LEGS UPSIDE DOWN ON A FLAT SURFACE. FASTEN 2 RISER BLOCKS ON EACH TABLE LEG USING 4 OF THE 3" LAG SCREWS AND 4 OF THE FLAT WASHERS.

STEP 2: PLACE PICNIC TABLE LEGS WITH RISER BLOCKS UPRIGHT ON FLAT SURFACE, MAKING SURE THE PILOT HOLES NEAR THE TOP OF THE TABLE LEGS ARE FACING OUTWARD.

STEP 3: PLACE SEAT ASSEMBLIES ONTO THE LEGS, MAKING SURE THE FRAMEWORK FITS INTO THE SLOTS IN THE TABLE LEGS AND THE LEGS ARE ON THE INSIDE OF THE ANGLE IRON SUPPORTS ON THE FRAME. LINE UP THE HOLES IN THE FRAMEWORK WITH THE HOLES IN THE LEGS. FASTEN LEGS TO FRAMEWORK USING 2 OF THE 2" LAG SCREWS AND 2 FLAT WASHERS PER SEAT ASSEMBLY END. DO NOT TIGHTEN!!

REF#	QTY	DESCRIPTION
1	1	TABLE TOP (Assembled)
2	2	TABLE SEAT (Assembled)
3	2	PLASTIC TABLE LEGS
4	4	RISER BLOCKS
5	4	10" DIAGONAL SEAT BRACES
	Ī	HARDWARE KIT
6	8	3/8" x 3" LAG SCREW
7	32	3/8" FLAT WASHER
8	20	3/8" x 2" LAG SCREW
9	4	3/8" x 1-1/4" HEX HEAD CAP SCREW
10	4	3/8" FLANGE NUT

<u>STEP 4:</u> INSTALL THE 4 SHORT DIAGONAL SEAT BRACES. ATTACH BRACES TO THE UNDERSIDE OF THE SEAT ASSEMBLY USING 1 OF THE FLAT WASHERS, 1 OF THE 1-1/4" HEX HEAD CAP SCREWS AND 1 OF THE FLANGE NUTS. ATTACH BRACE TO THE TABLE LEG USING 1 OF THE 2" LAG SCREWS AND 1 OF THE FLAT WASHERS. REPEAT FOR REMAINING 3 BRACES. **DO NOT TIGHTEN!!** 

<u>STEP 5:</u> PLACE THE TABLE TOP ASSEMBLY ONTO THE LEGS SO THE FRAMEWORK FITS INTO THE SLOTS ON EACH TABLE LEG AND THE LEGS ARE ON THE <u>INSIDE</u> OF THE ANGLE IRON SUPPORTS ON THE FRAME. FASTEN THE TABLE TOP ASSEMBLY TO THE LEGS USING 4 OF THE 2" LAG SCREWS AND 4 FLAT WASHERS PER END. **DO NOT TIGHTEN!!** 

STEP 6: SQUARE UP THE PICNIC TABLE LEGS WITH THE TOP AND SEATS. TIGHTEN ALL FASTNERS.



## **Step-Over Recycled Plastic Picnic Table - 8 Ft. - Double Sided ADA** 133-1060

